

ELECTRICAL COMPONENT LOCATOR

1995 Volvo 850

1995 ELECTRICAL COMPONENT LOCATION
Volvo Electrical Components

850


SAFETY PRECAUTION

WARNING: When working on vehicles equipped with Supplemental Restraint System (SRS), never apply electrical voltage to the system. This could cause the SRS (air bag) to be deployed.

BUZZERS, RELAYS & TIMERS

Component	Component Location
ABS Combination Relay	Above ABS control module, near brake master cylinder.
A/C Relay	Behind glove compartment.

CENTRAL ELECTRICAL UNIT

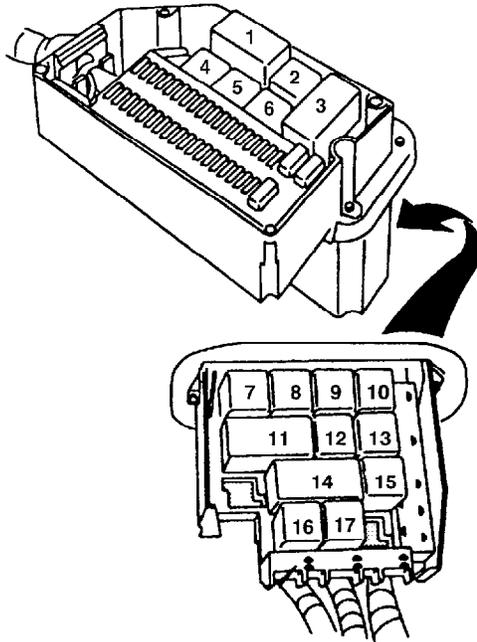

- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |


96H03747
Anti-Theft Alarm Module
Relay

On central electric unit,
position No. 14.

Blower Fan Relay (High Speed)

Behind glove compartment.

CENTRAL ELECTRICAL UNIT

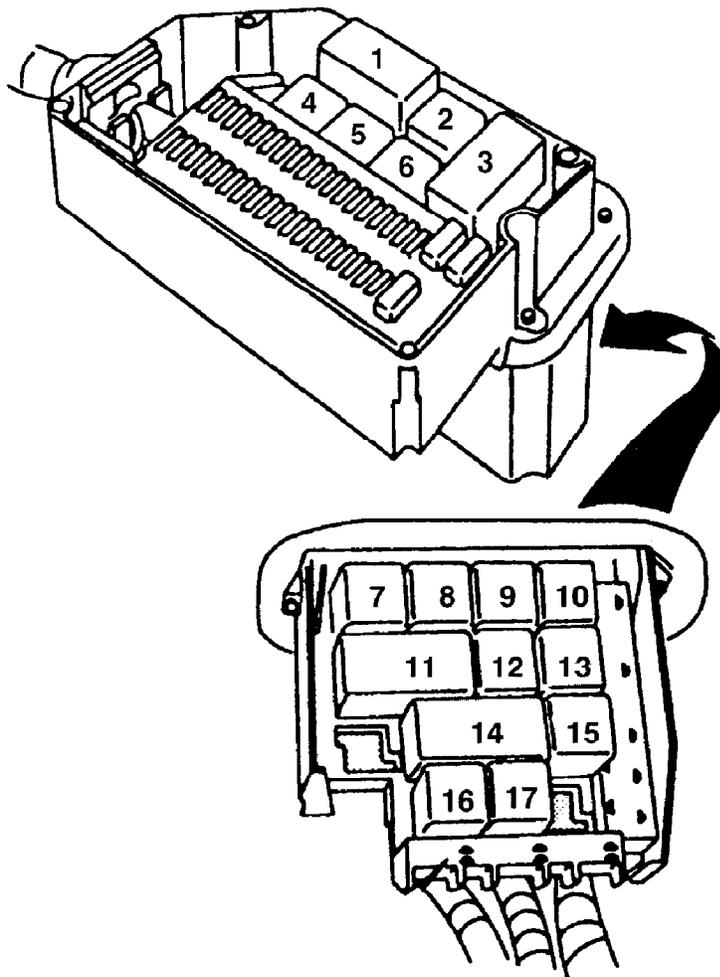


- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Central Locking & Delayed
Inside Lighting Relay

On central electric unit,
position No. 11.


CENTRAL ELECTRICAL UNIT

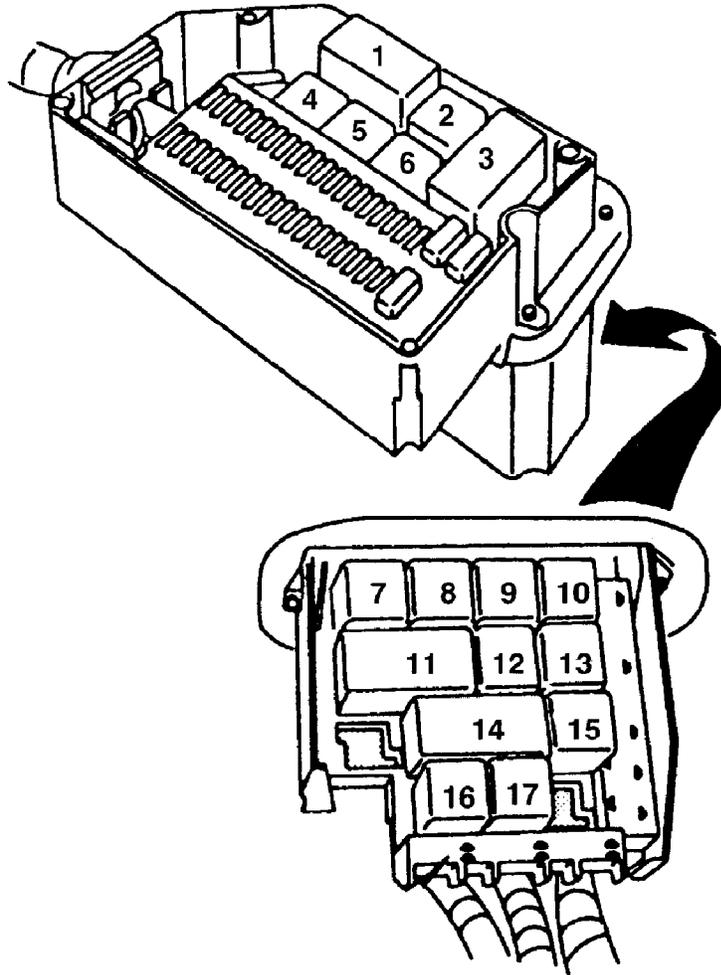

- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Deadlock Setting Relay


On central electric unit,
position No. 8.

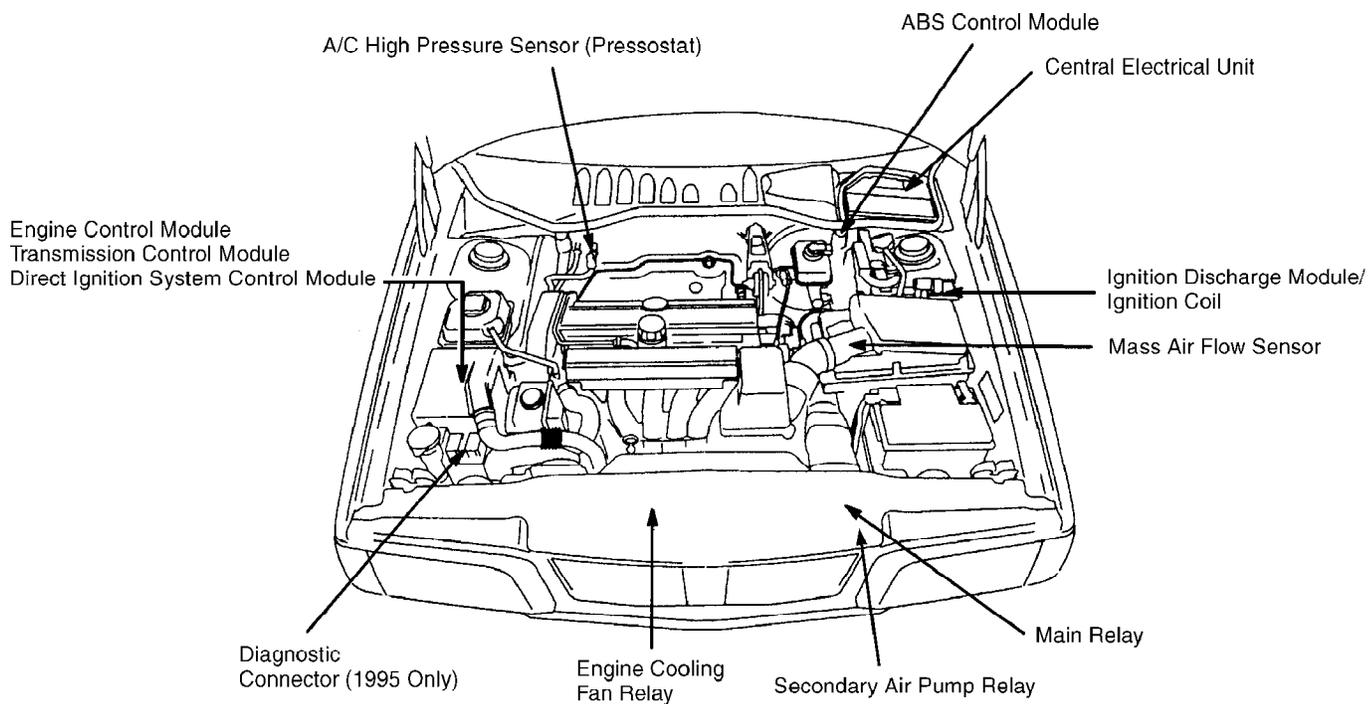

96A03744
 Engine Cooling Fan Relay

On top right of radiator
 shroud.

CENTRAL ELECTRICAL UNIT

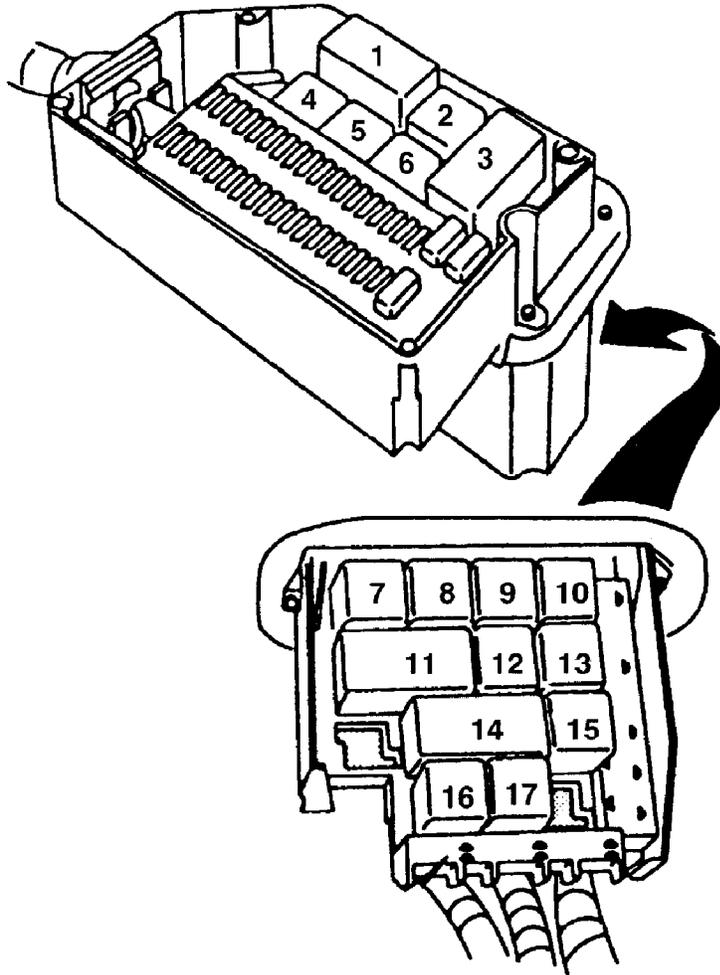


- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Fog Lamp Relay

On central electric unit,
position No 7.

CENTRAL ELECTRICAL UNIT

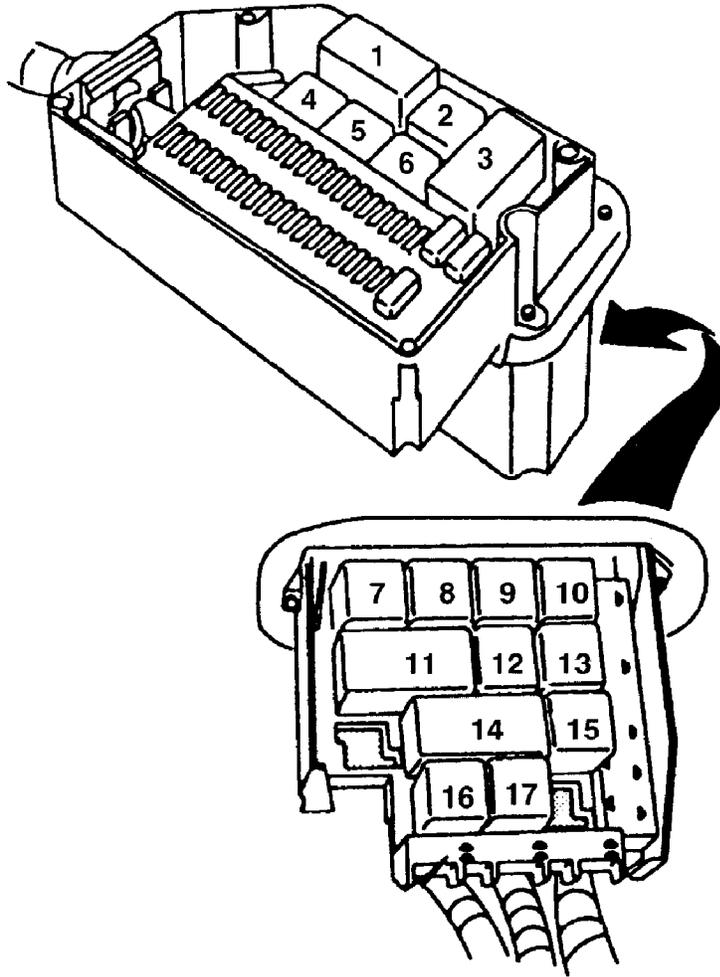


- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Fuel Pump Relay

On central electric unit,
position No 2.

CENTRAL ELECTRICAL UNIT

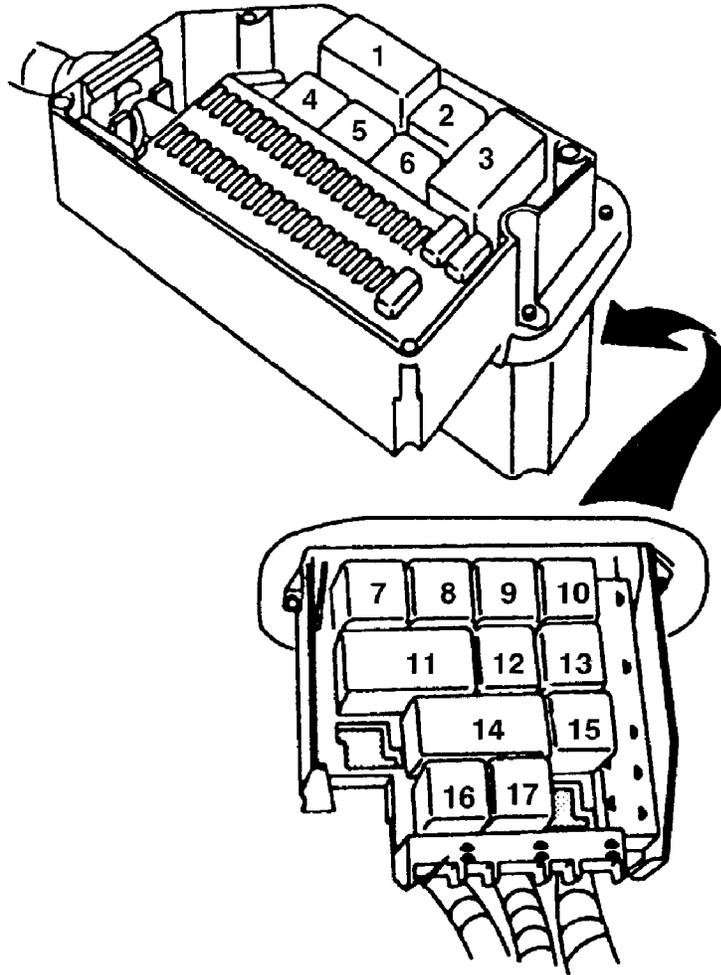


- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Heated Rear Seat Relay

On central electric unit,
position No. 17.

CENTRAL ELECTRICAL UNIT

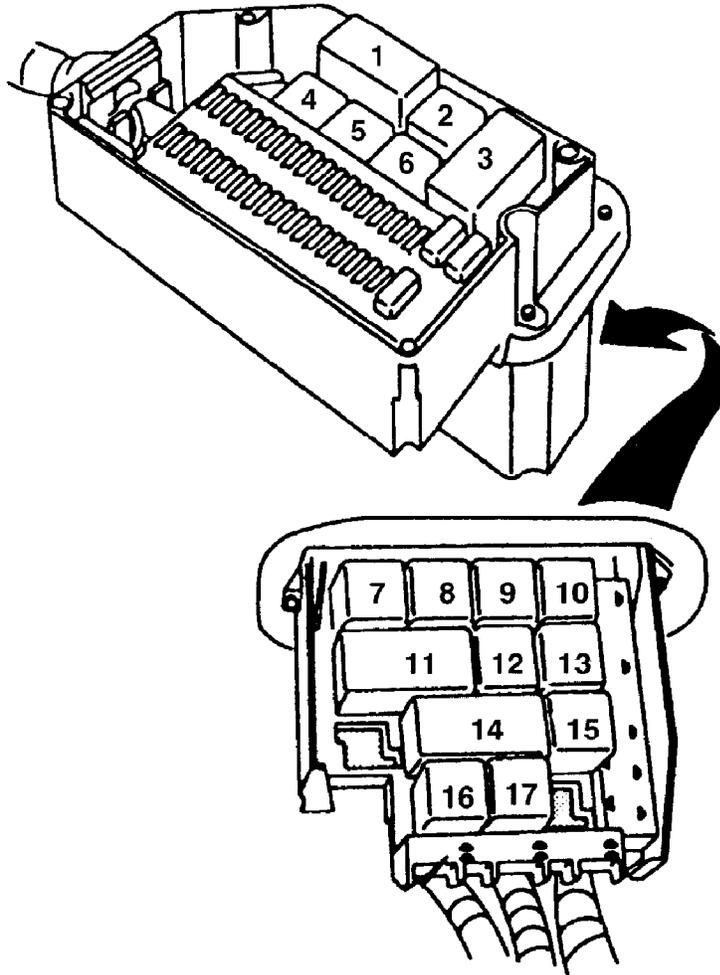


- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Heated Rear Window & Door
Mirrors Relay

On central electric unit,
position No. 13.

CENTRAL ELECTRICAL UNIT

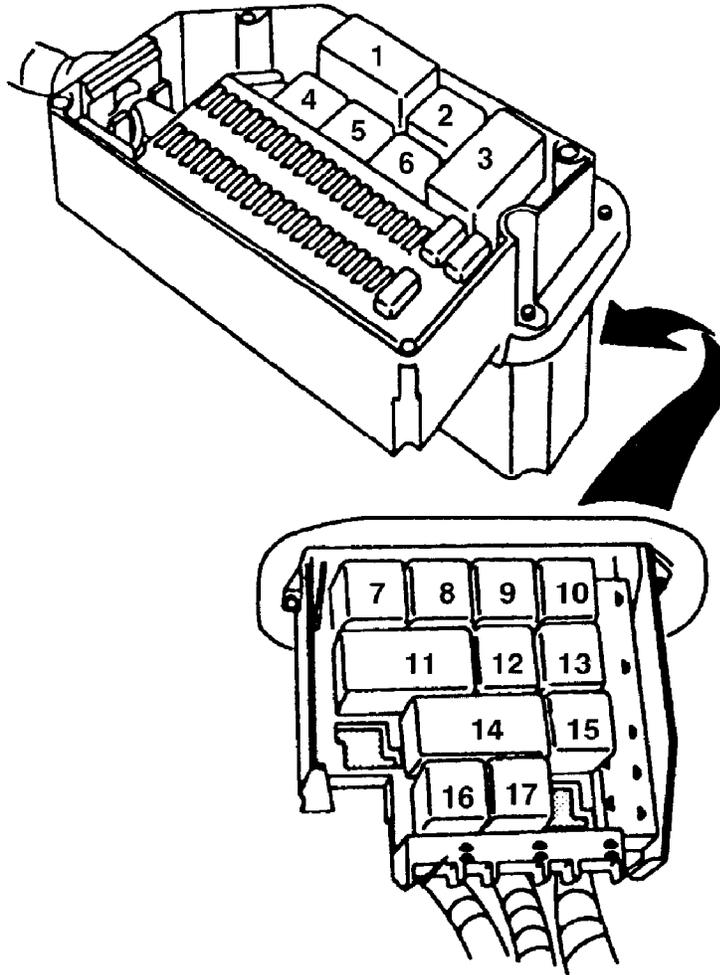


- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Intermittent Wiper Relay
(Front)

On central electric unit,
position No. 9.

CENTRAL ELECTRICAL UNIT

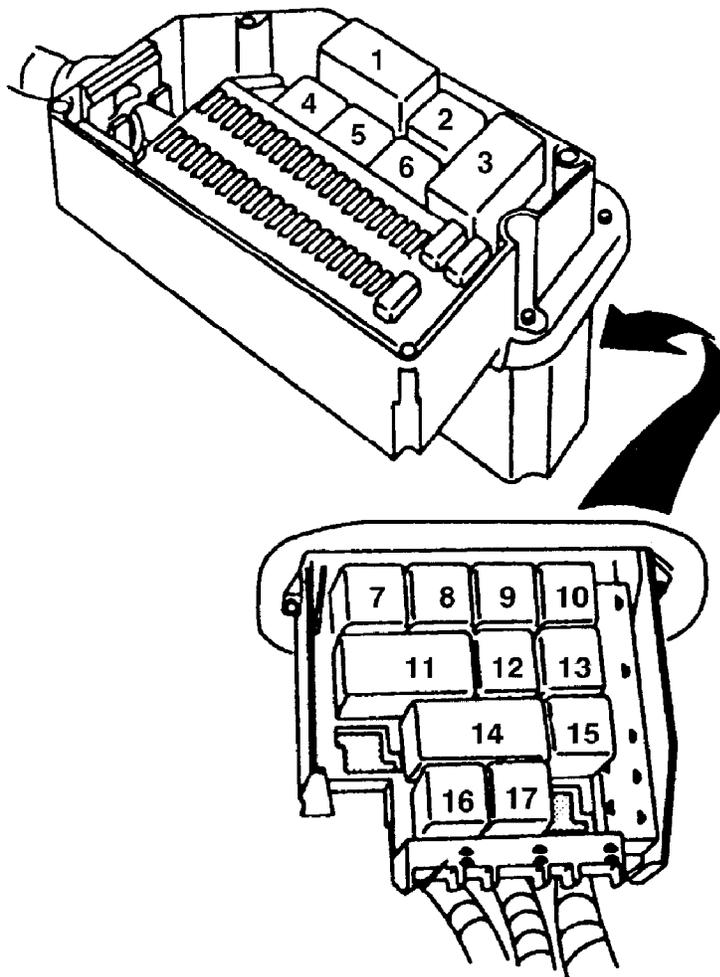


- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Intermittent Wiper Relay
(Rear)

On central electric unit,
position No. 10.


CENTRAL ELECTRICAL UNIT

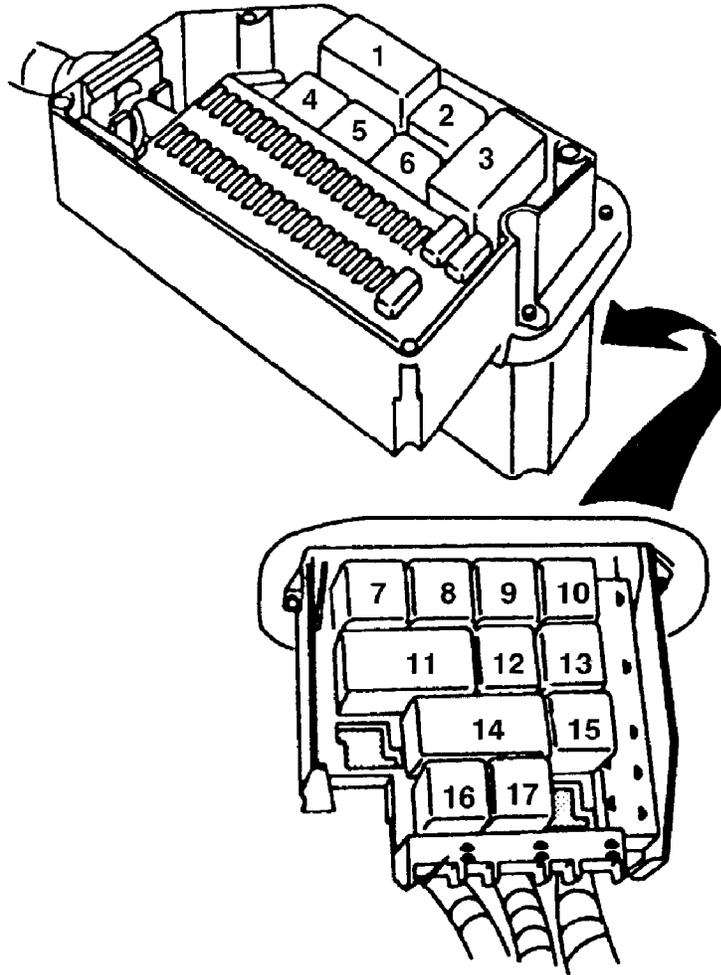

- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Main Headlamp Relay With
Bulb Malfunction Indicator


On central electric unit,
position No. 3.

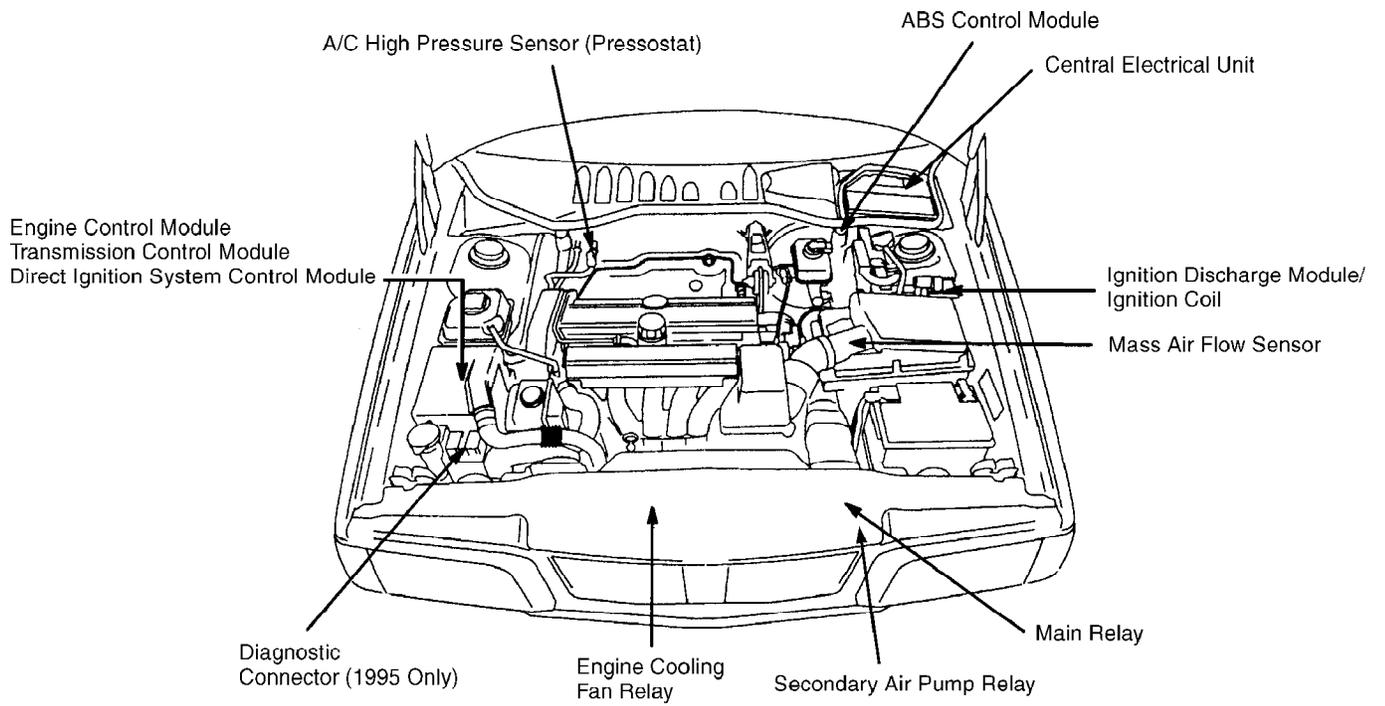

96A03744
Main Relay

On top left of radiator
shroud.

CENTRAL ELECTRICAL UNIT

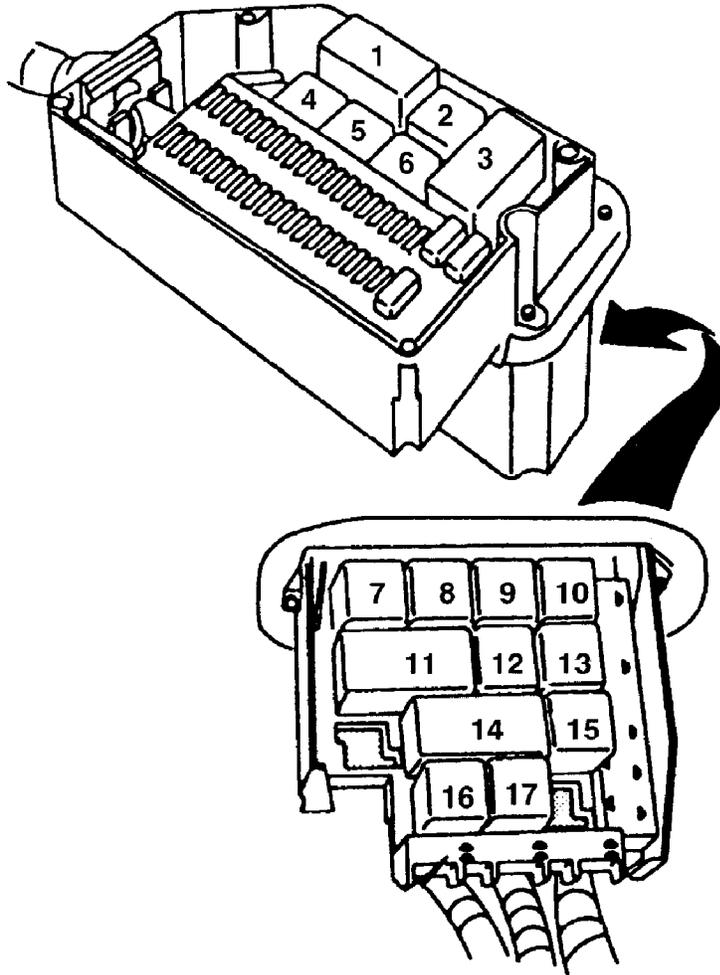


- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Overload Relays (3)

On central electric unit,
positions No. 4, 5 & 6.


CENTRAL ELECTRICAL UNIT

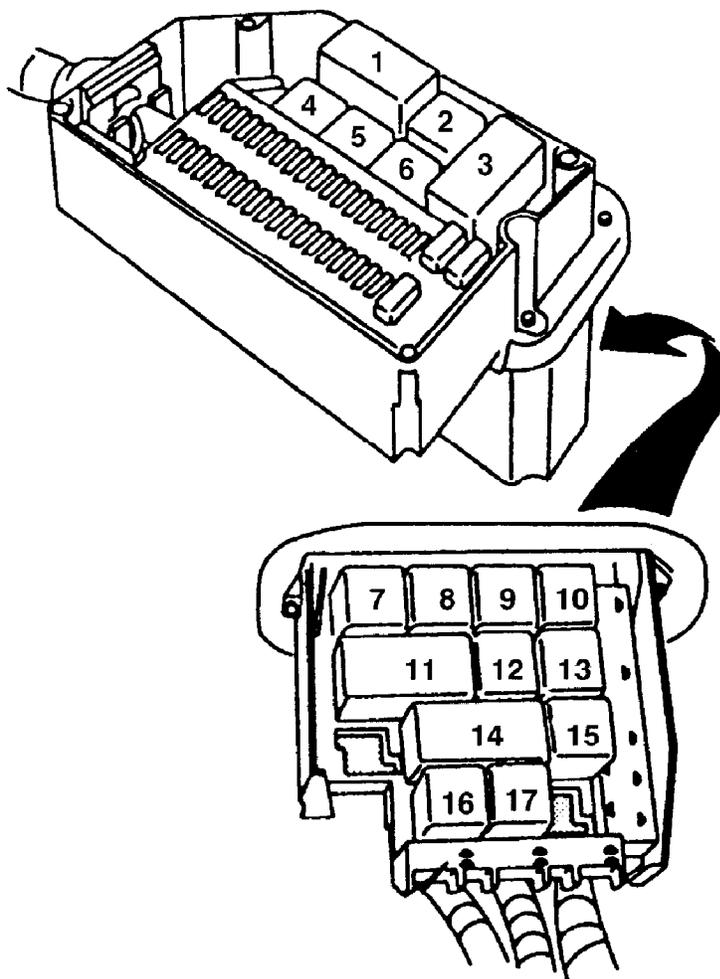

- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Seat Belt Reminder/Key
Warning Relay


On central electric unit,
position No. 15.

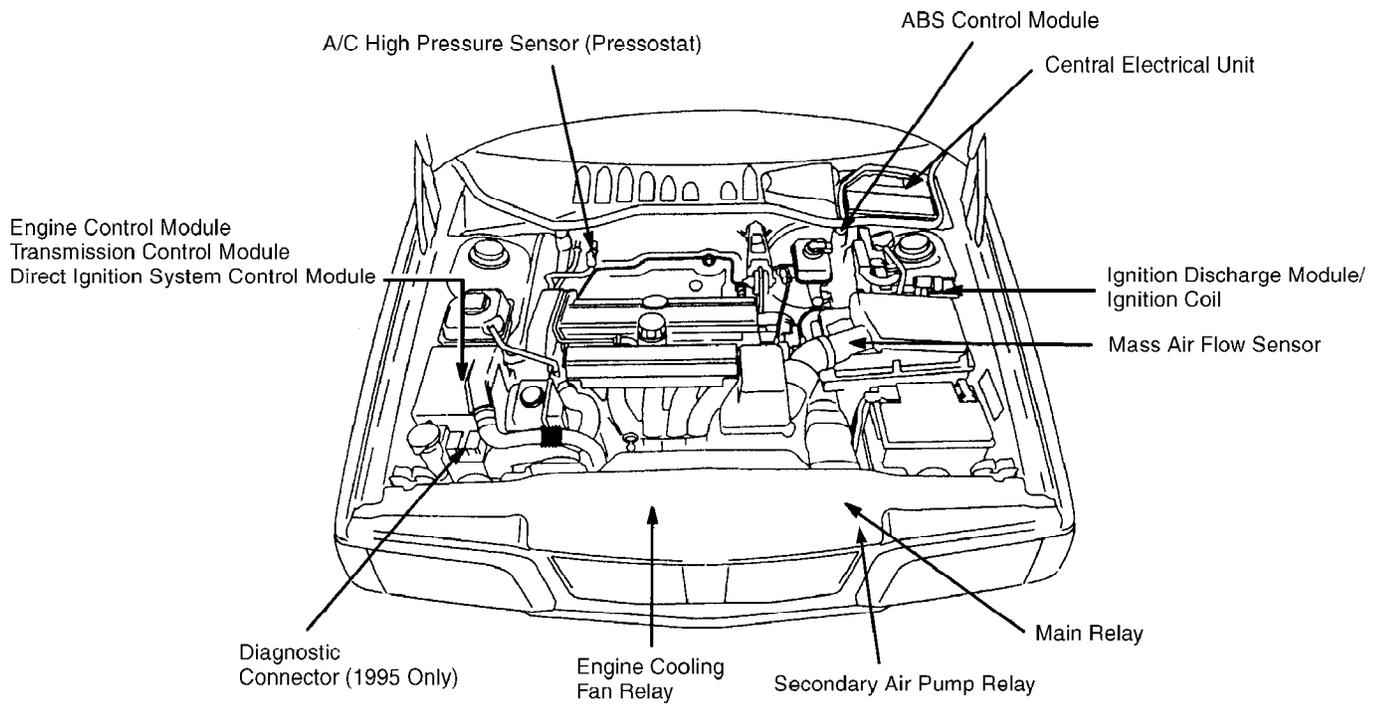

96A03744
 Secondary Air Pump Relay

Front left side of engine compartment.

CENTRAL ELECTRICAL UNIT

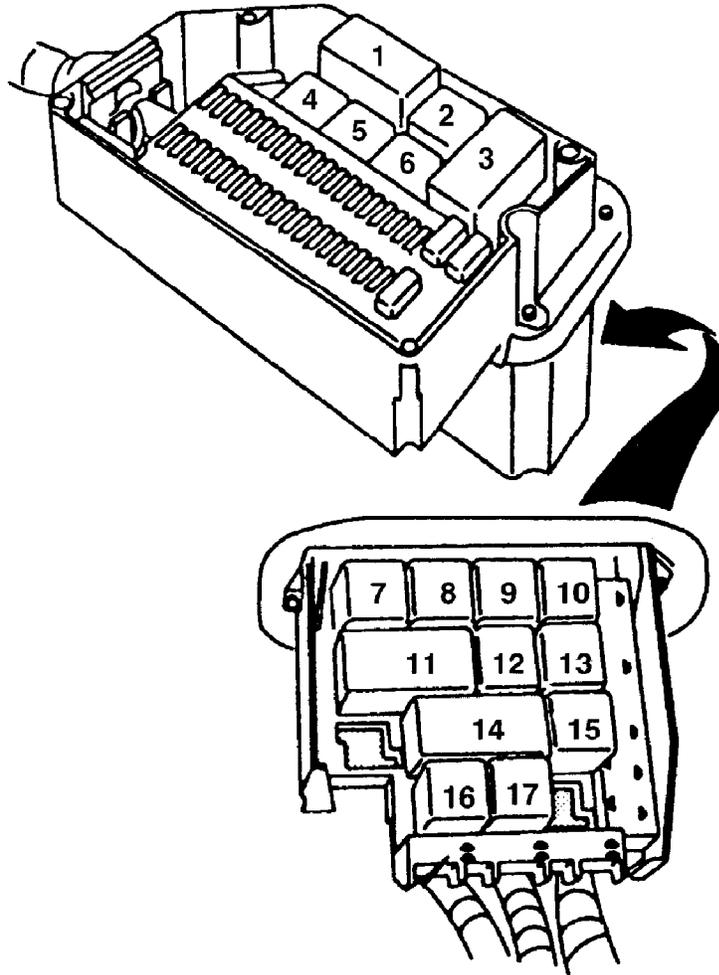

- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |


96H03747
Speed Warning Or Exhaust
Temperature Sensor Relay

On central electric unit,
position No. 12.

CIRCUIT PROTECTION DEVICES

Component

Component Location

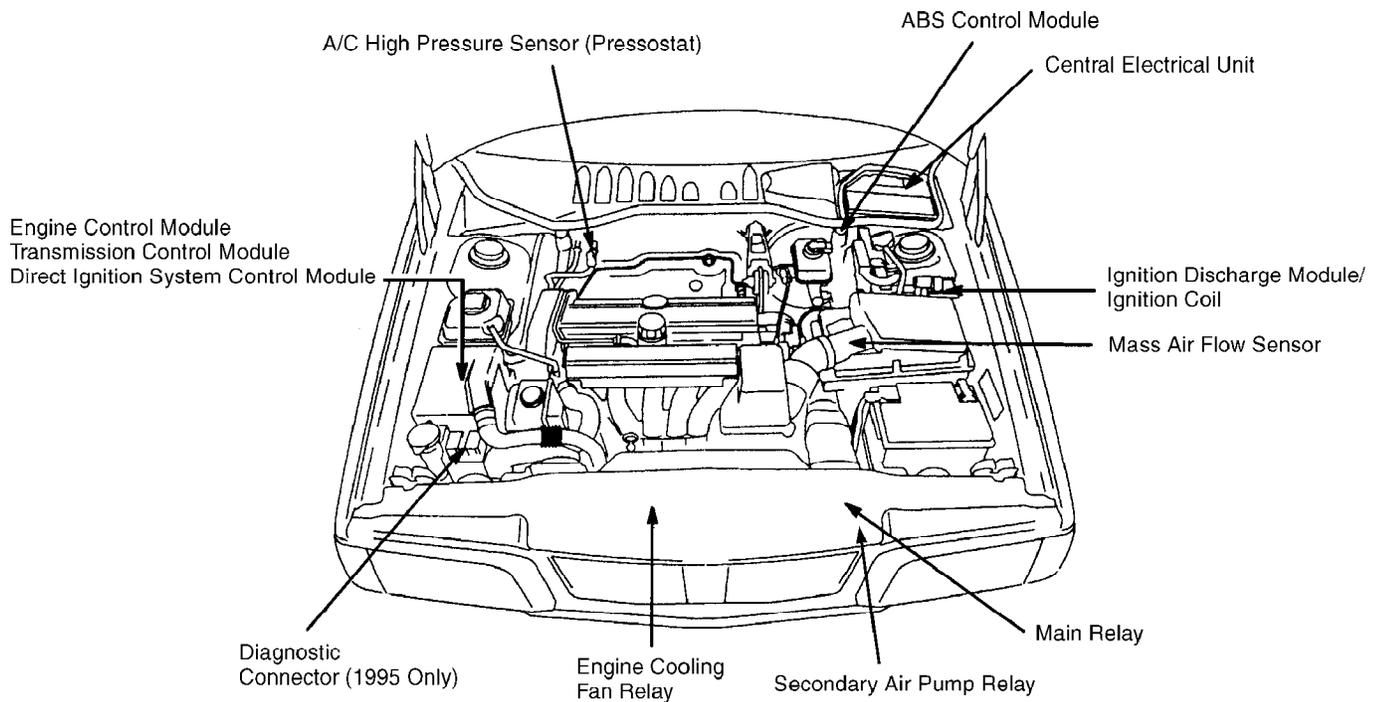


96A03744
Central Electrical Unit

On left rear of engine compartment.

CONTROL UNITS

Component

Component Location

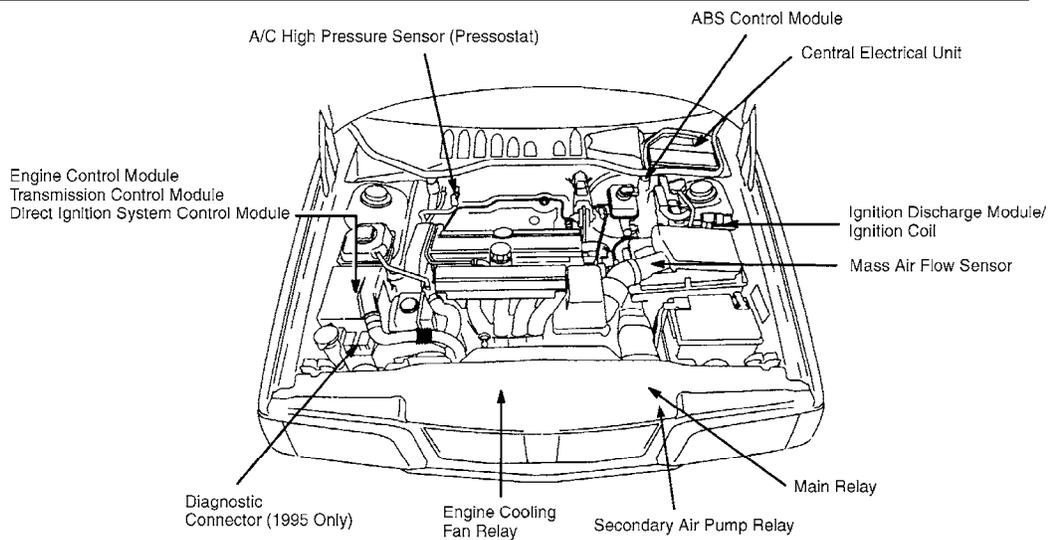

96A03744
ABS Control Module


On left rear of engine compartment, above ABS hydraulic unit.

Anti-Theft Alarm/Central Lock

Remote Control Module

Behind right side of dash.


CENTRAL ELECTRICAL UNIT

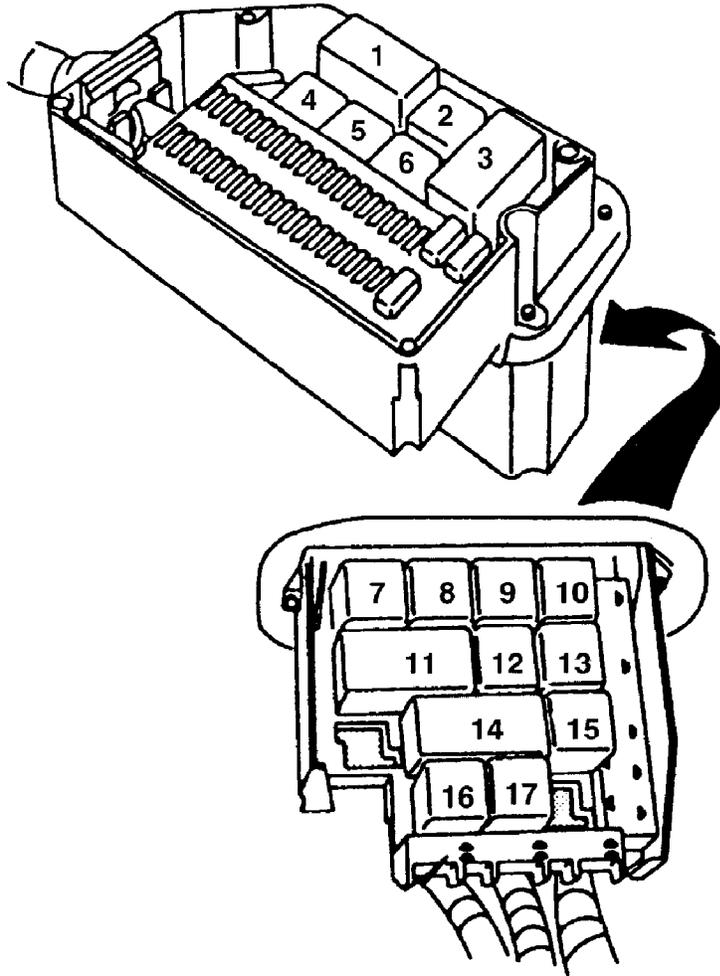

- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

96H03747
Cruise Control Module

On electric control unit,
position No. 1.

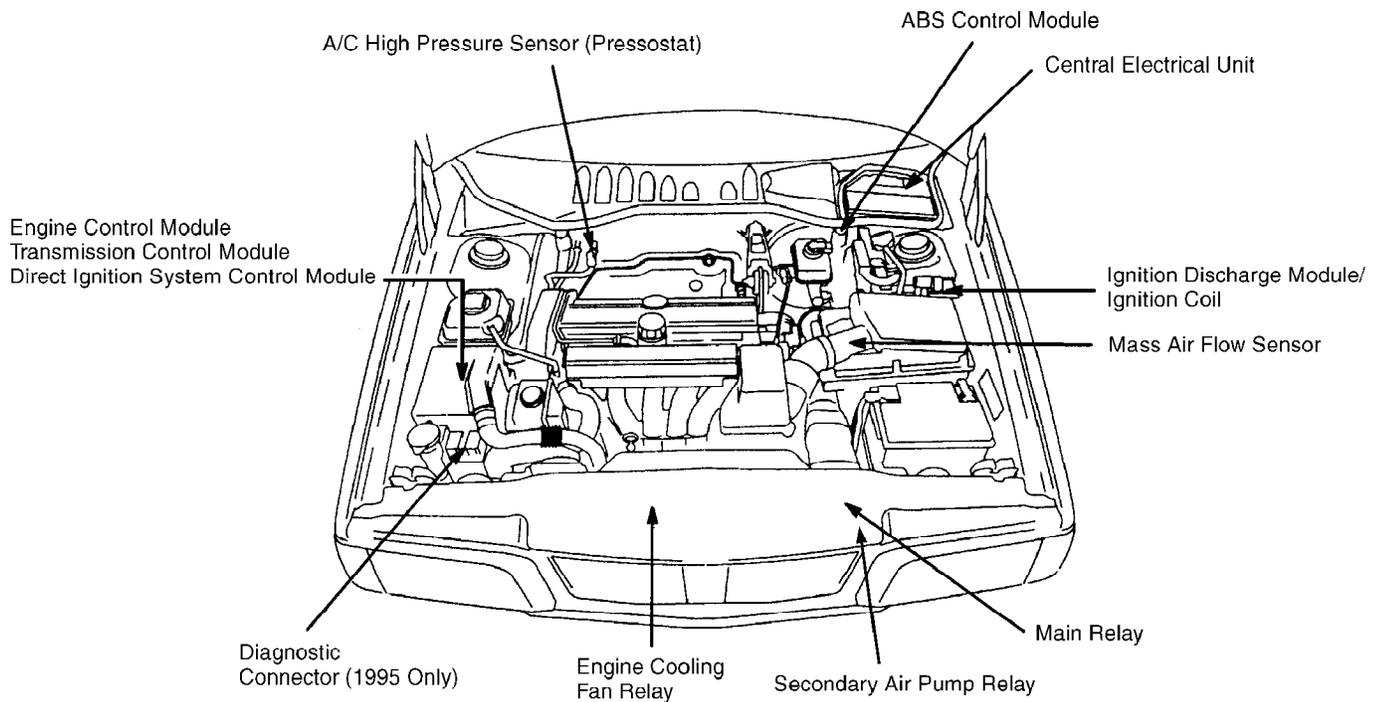


96A03744
 Direct Ignition System
 Control Module

On right front inner fender
 panel, in control module box.


Electronic Climate Control
 Control Unit

Integrated with A/C control
 panel.

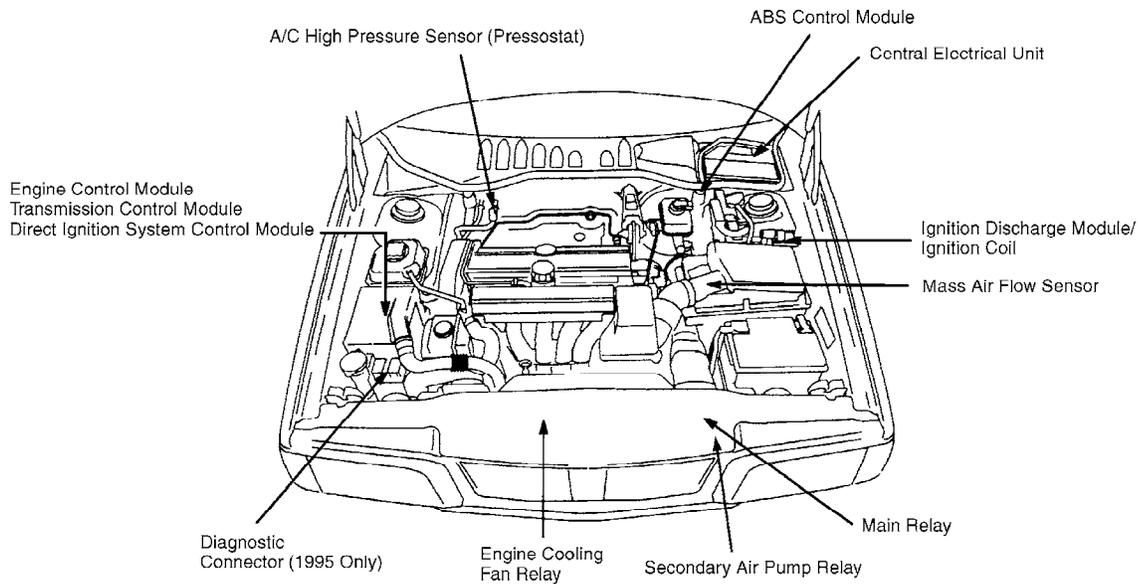

96A03744
 Engine Control Module

On right front inner fender
 panel, in control module box.

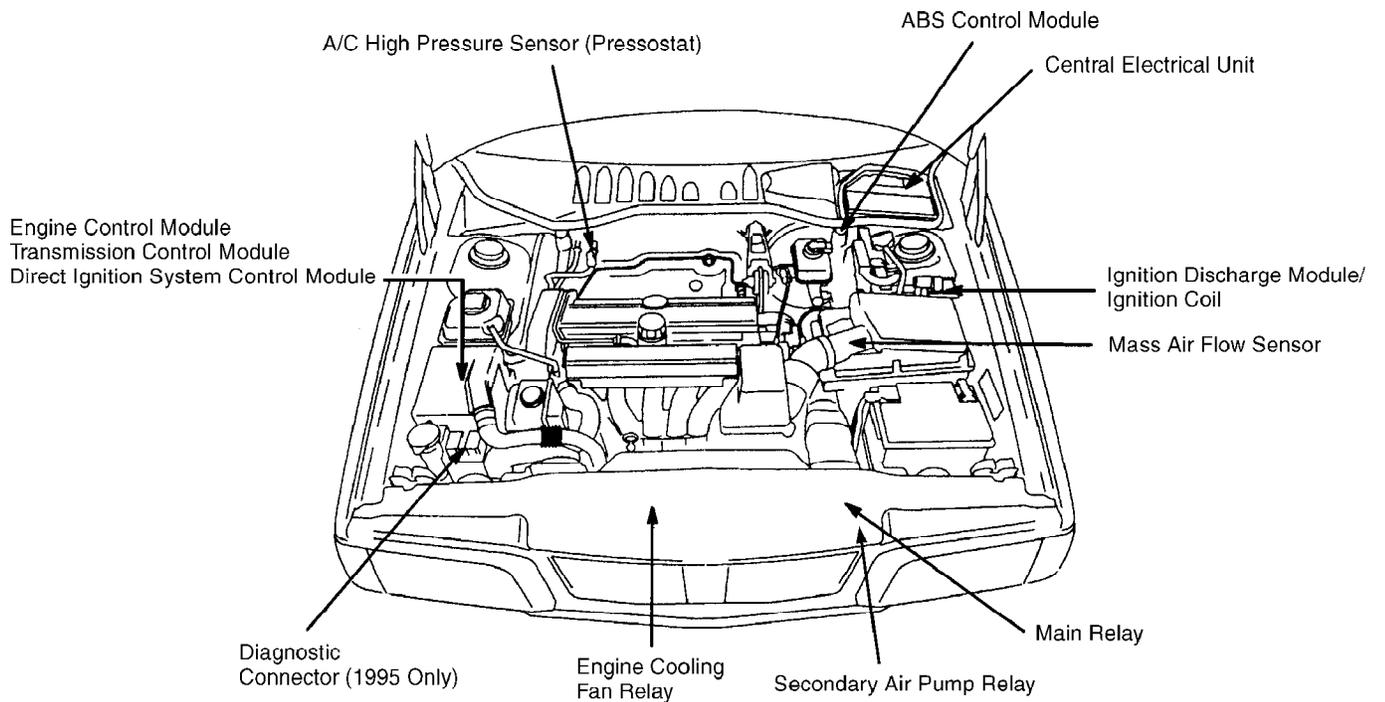

96A03744
Ignition Discharge
Module/Ignition Coil

Left side of engine
compartment.

Seat Control Modules


Under driver's & passenger's
seat.

SRS Sensor Unit

Under floor console behind
shift lever.

Sunroof Control Module

Behind interior roof lamp
assembly.

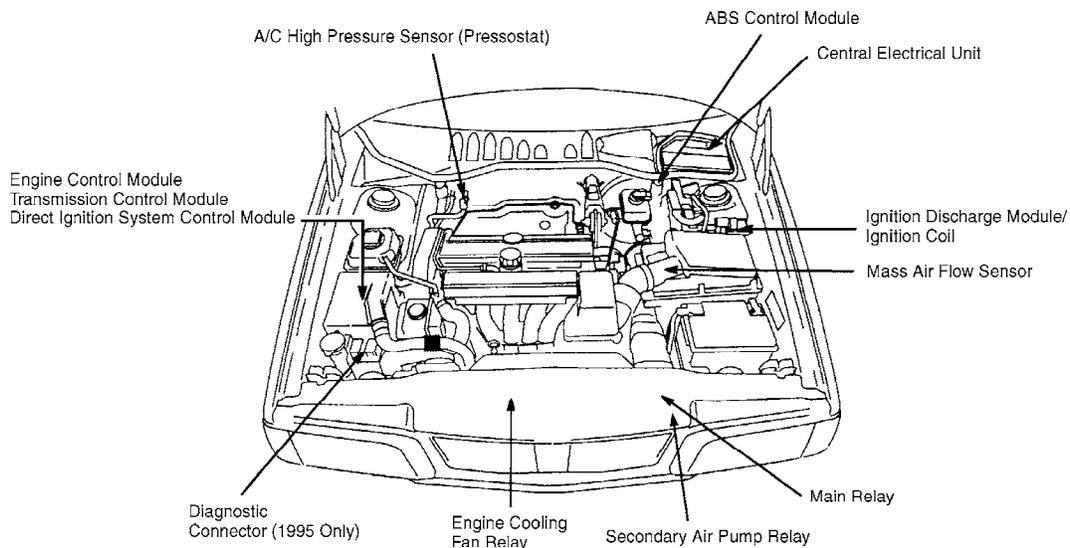

96A03744
Transmission Control Module


On right front inner fender
panel, in control module box.

MOTORS


Component	Component Location
Blower Motor	Behind right side of dash, on A/C-heater housing.
Power Sunroof Motor	On front center of sunroof opening.

SENDING UNITS & SENSORS

Component	Component Location
ABS Brake Pedal Sensor	On right side of brake master cylinder.
ABS Wheel Speed Sensors	On each wheel hub.
Acceleration Sensor	On center of firewall.

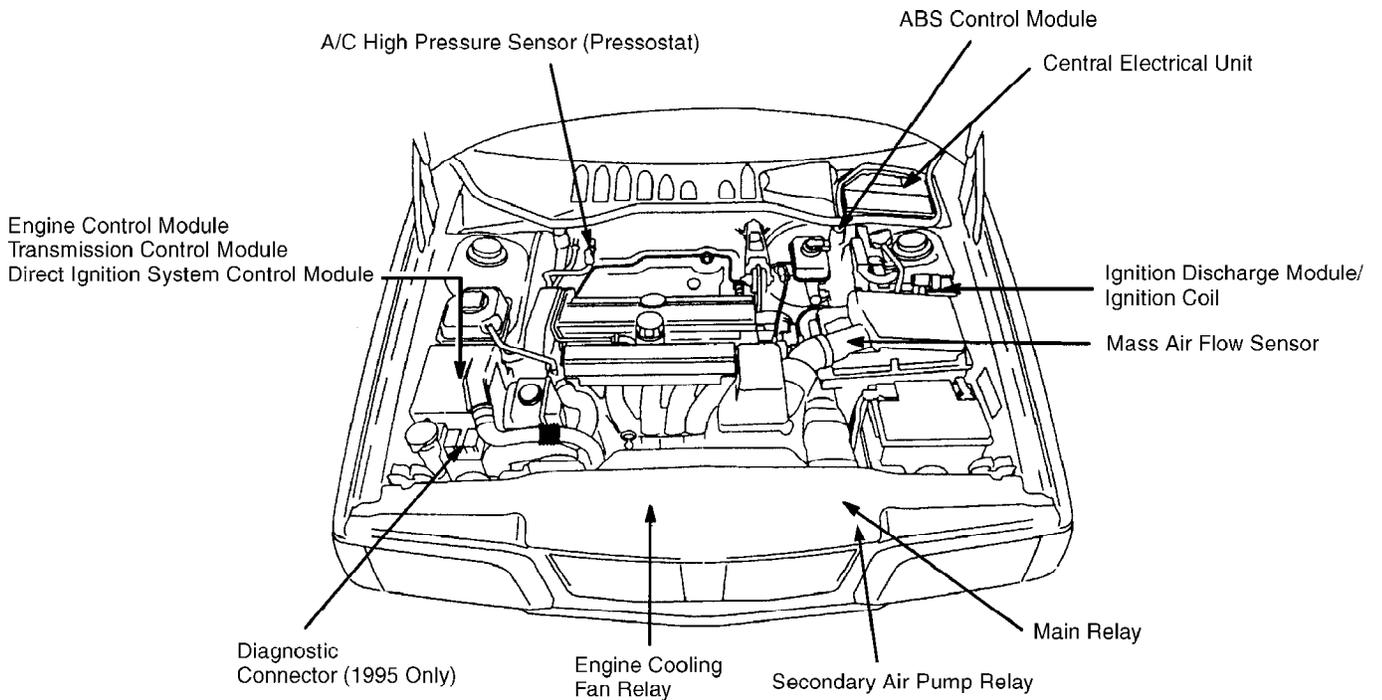

A/C High Pressure Sensor (Pressostat) <small>96A03744</small>	On A/C line, on right side of firewall.
A/T Fluid Temperature Sensor	On left side of transaxle.
Bulb Failure Warning Sensor	On left side of luggage compartment.

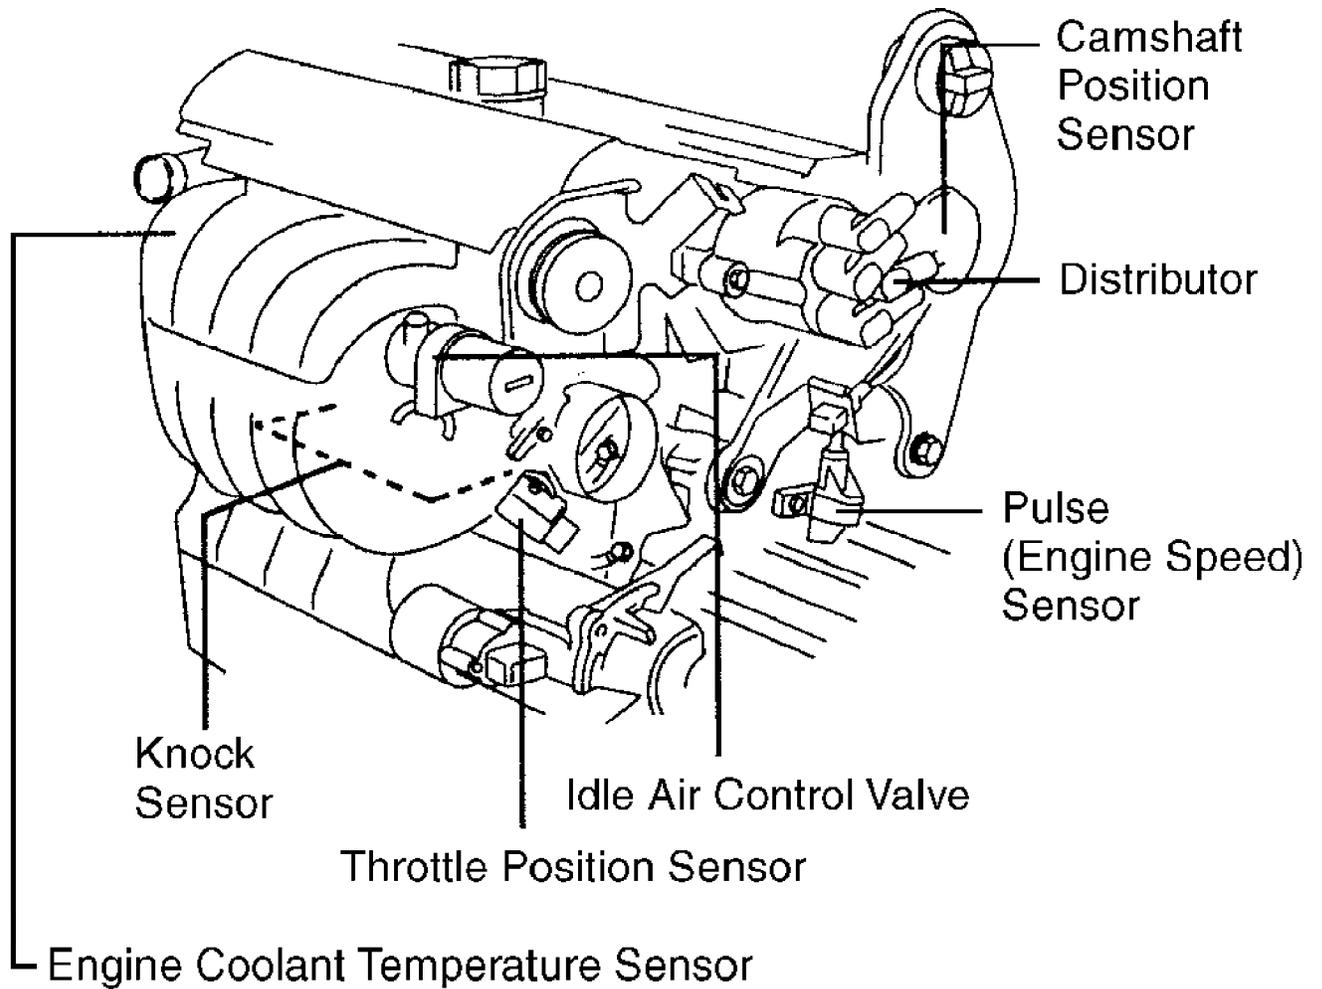

96D03745

Camshaft Position Sensor


On right rear of engine.

Duct Temperature Sensor (ECC)

In driver's or passenger's side ventilation duct.

EGR Temperature Sensor

On base of EGR valve, on left rear of engine.

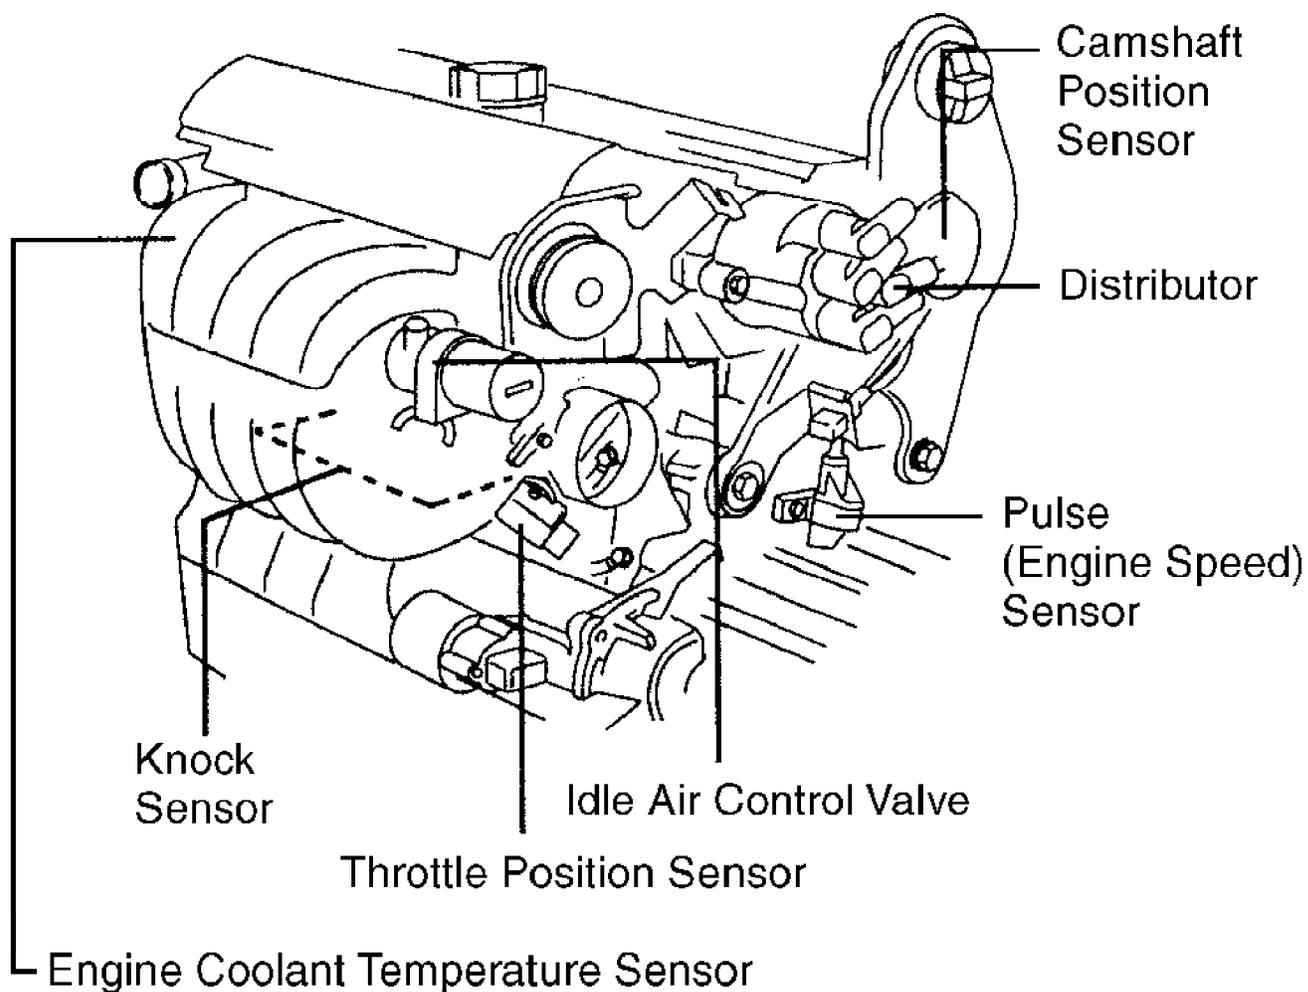

96D03745

Engine Coolant Temperature Sensor

On left front of engine.

Heated Oxygen Sensor (Front)

In front of catalytic converter.

Heated Oxygen Sensor (Rear)

Behind catalytic converter.

In-Car Temperature Sensor


Behind driver's or passenger's grab handle.

Intake Air Temperature Sensor

In air intake hose, near air cleaner.


Intake Manifold Pressure Sensor

On left side of engine, on intake manifold.

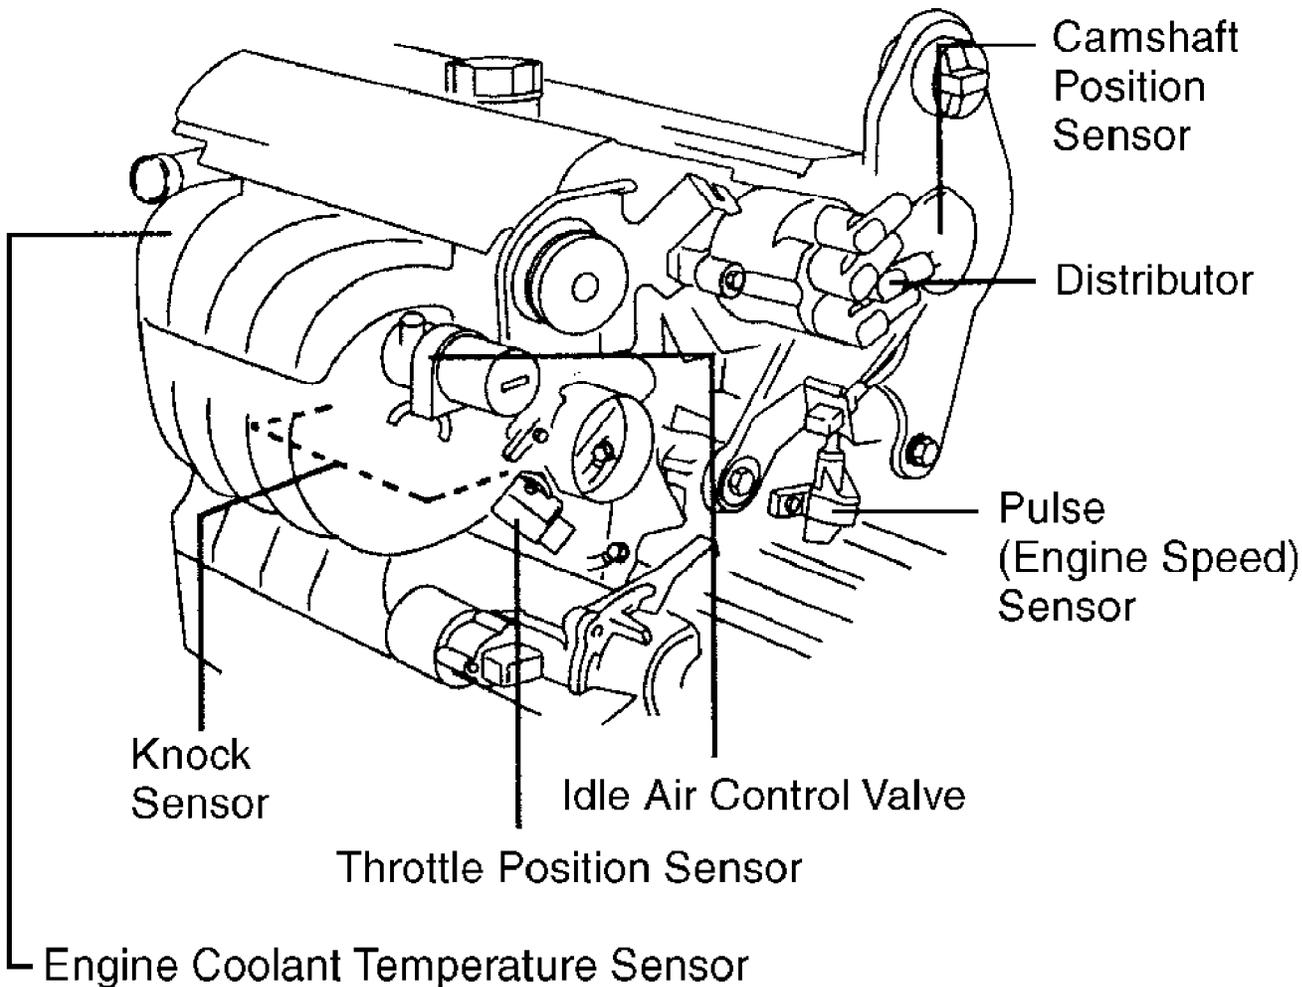

96D03745
Knock Sensors (2)

On lower front of engine.

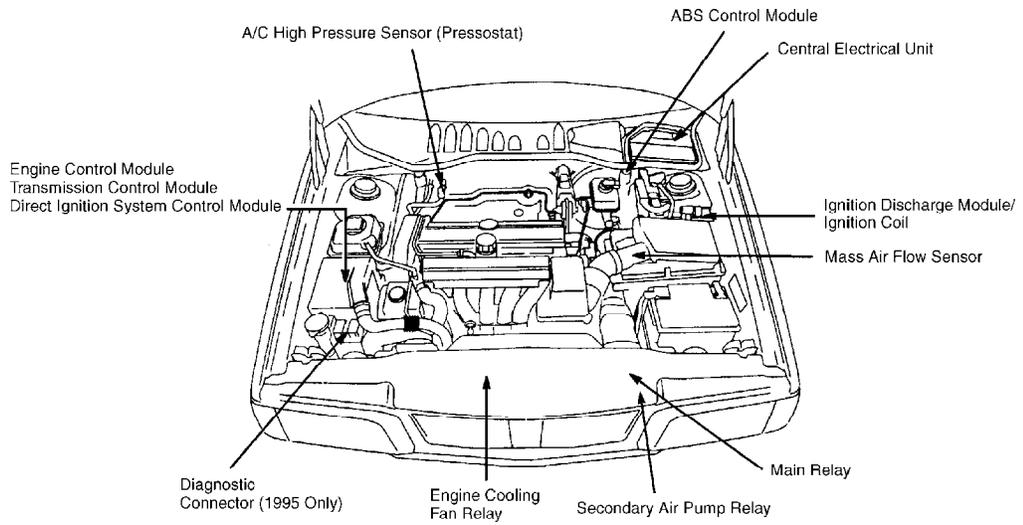

96A03744
Mass Air Flow Sensor


On air cleaner housing.

Oil Pressure Sensor

Lower left side of engine.

Outside Temperature Sensor (ECC)

On right side of firewall,
near A/C air intake.

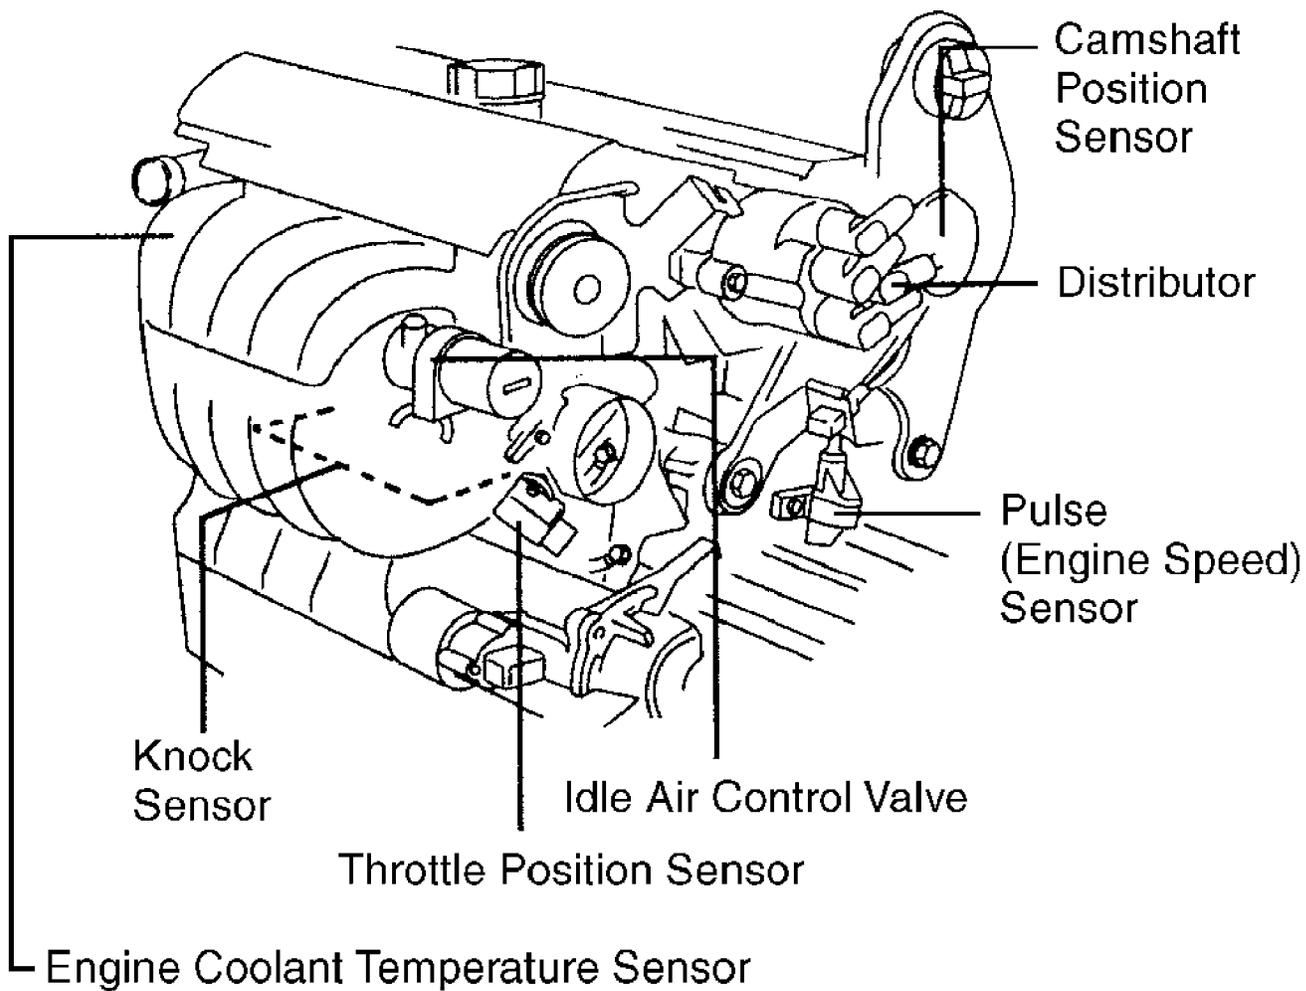


96D03745

Pulse (Engine Speed) Sensor

On rear of engine, above
bellhousing.

Solar Sensor (ECC)


On top right of dash.

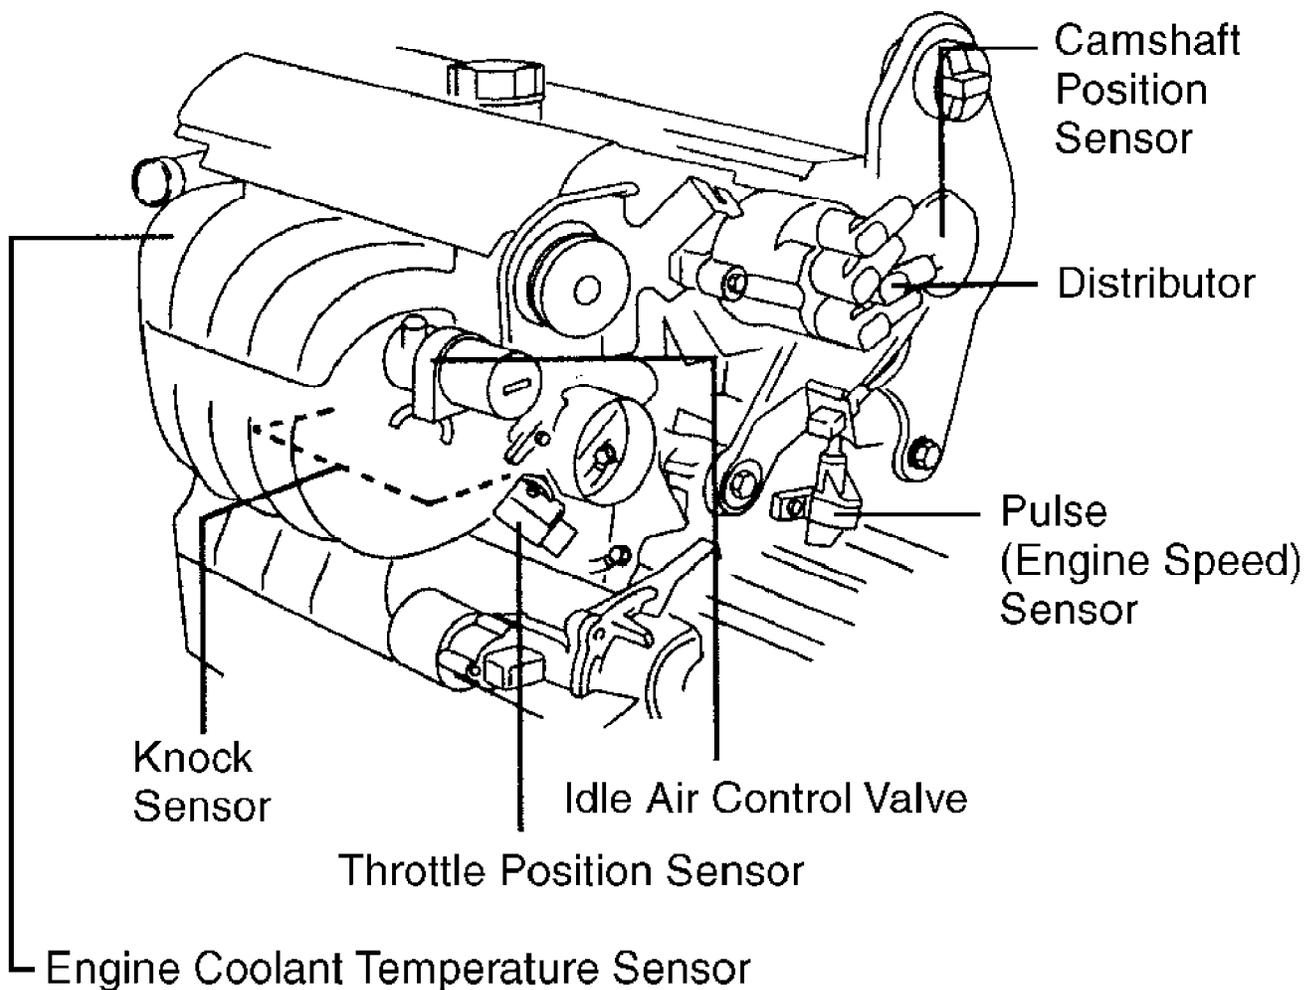

96D03745 Throttle Position Sensor	On throttle body assembly.
Transmission Range Sensor	On left side of transaxle.

SOLENOIDS & SOLENOID VALVES

Component	Component Location
A/C Switch Solenoid	On A/C compressor.
A/T Shift Solenoids	On transaxle valve body.
Auxiliary Air Intake Solenoid	Front center of engine compartment, next to radiator.
EVAP Valve	On top left of radiator shroud.

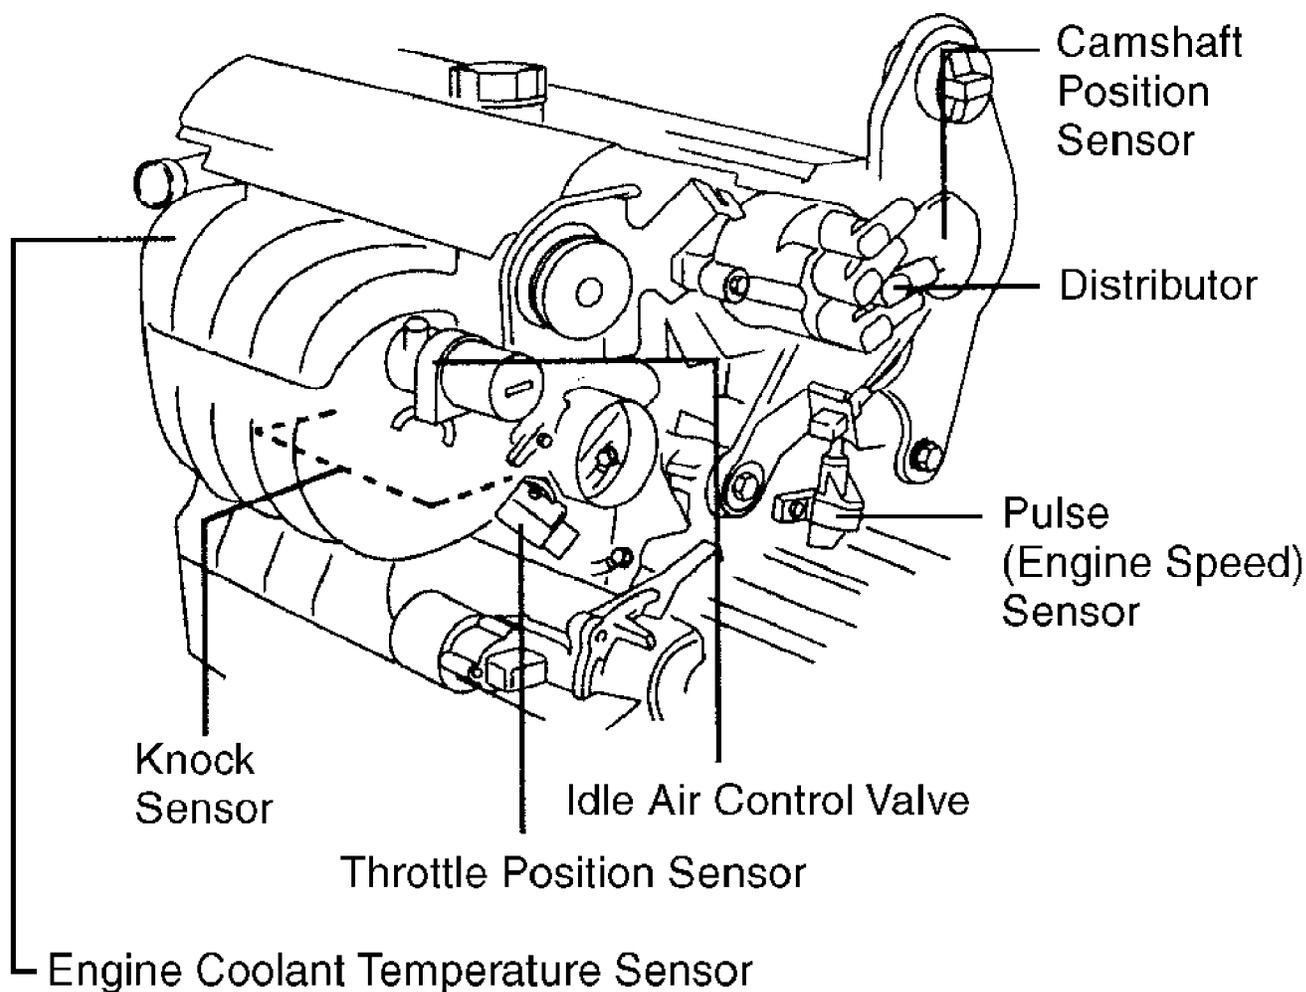

96D03745 Idle Air Control Valve	On left rear engine.
P-Shift Lock Solenoid (A/T)	Under shifter console, forward of shift lever.
Turbo Control Valve	Between turbo & left rear of engine.
Variable Intake Manifold Solenoid	On left side of engine compartment, between air cleaner & engine.

SWITCHES


Component	Component Location
A/C High Pressure Switch	On A/C line, near receiver-drier.
Brake Switch	On bracket, above brake pedal.

Back-Up Lamp Switch	On transaxle.
Clutch Switch	On bracket, above clutch pedal.
Handbrake Switch	At base of handbrake.
Seat Belt Reminder Switch	On driver-side seat belt buckle.

MISCELLANEOUS


Component	Component Location
ABS Hydraulic Unit	On left rear of engine compartment, near brake master cylinder.
Alarm Horn	Rear center of engine compartment.
Blower Motor Resistor	Mounted on blower fan housing.

Data Link Connector

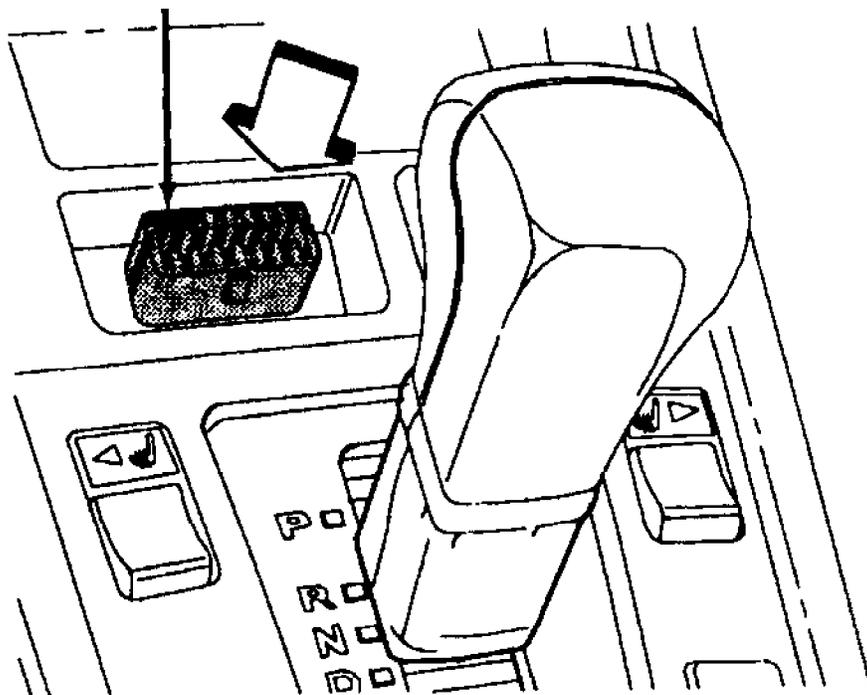

96F03746
Data Link Connector

On center console, forward of shift lever & near ECM.

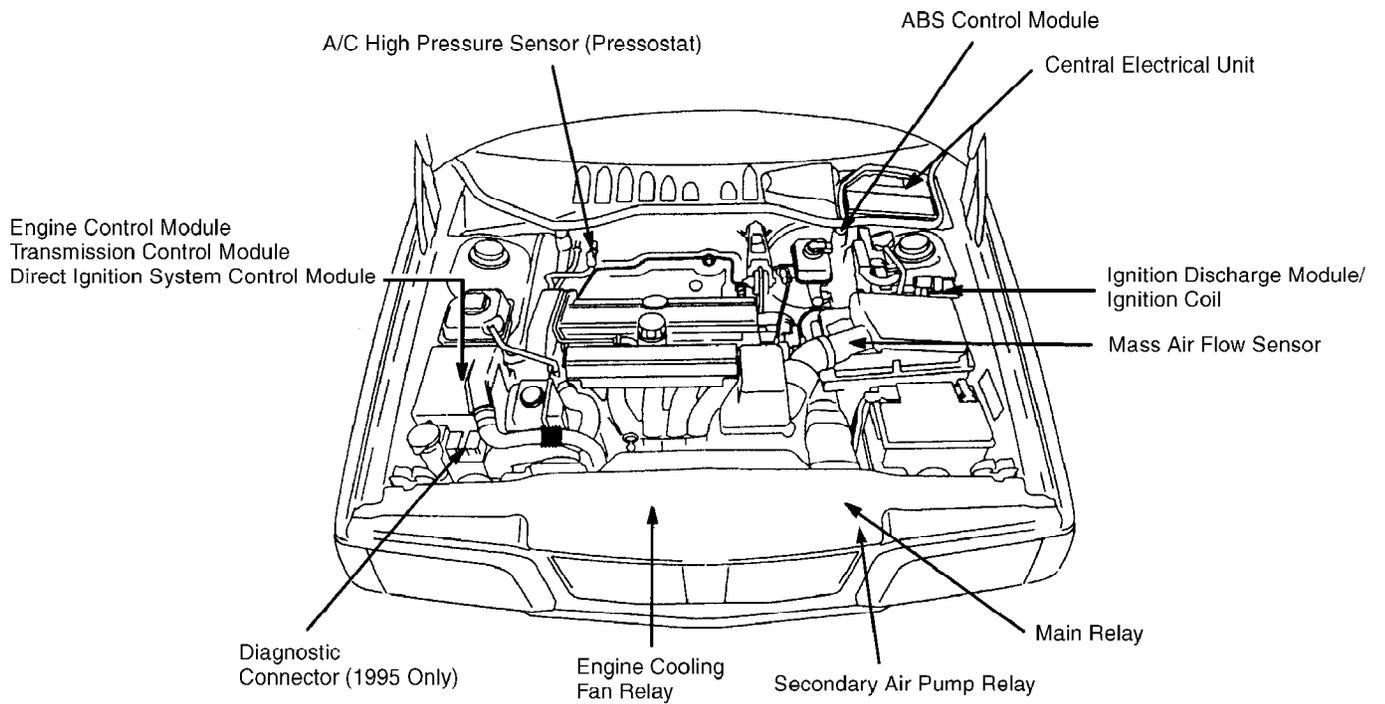


96A03744
Diagnostic Connector

On center console, forward of shift lever & near ECM.

EGR Converter

On top center of radiator shroud.

CENTRAL ELECTRICAL UNIT

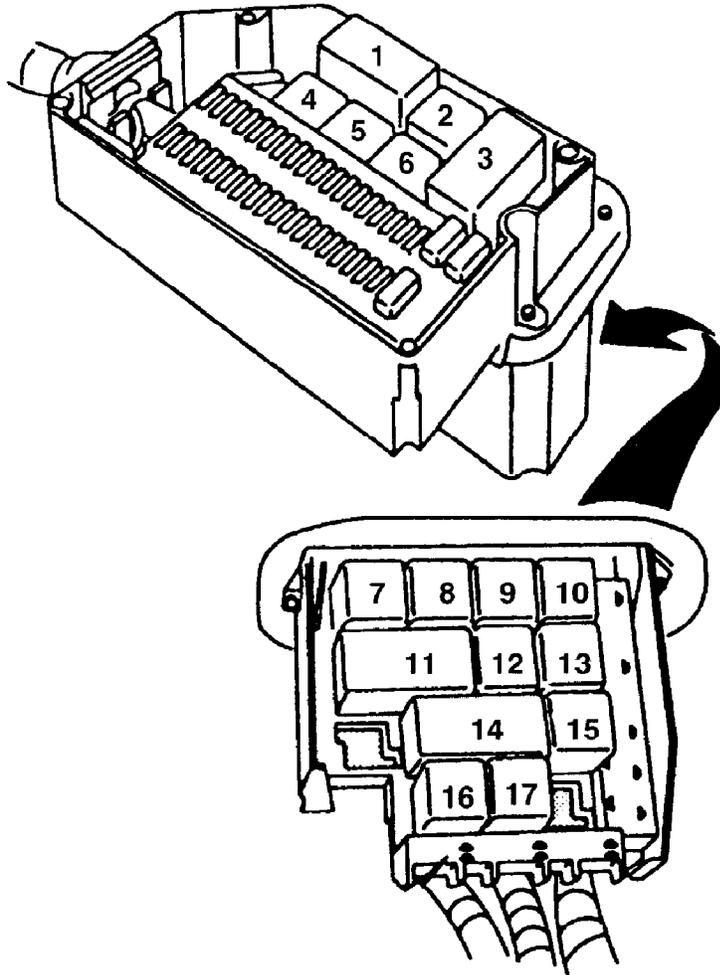

- | | |
|--|---|
| 1. Cruise Control Module | 10. Intermittent Wiper Relay (Rear) |
| 2. Fuel Pump Relay | 11. Central Locking & Delayed Inside Lighting Relay |
| 3. Main Headlamp Relay With Bulb Malfunction Indicator | 12. Speed Warning Or Exhaust Temperature Sensor Relay |
| 4. Overload Relay (X) | 13. Heated Rear Window & Door Mirrors Relay |
| 5. Overload Relay (15) | 14. Anti-Theft Alarm Module Relay |
| 6. Overload Relay (X) | 15. Seat Belt Reminder/Key Warning Relay |
| 7. Fog Lamp Relay | 16. Front Fog Lamp Bridge |
| 8. Deadlock Setting Relay | 17. Heated Rear Seat Relay |
| 9. Intermittent Wiper Relay (Front) | |

^{96H03747}
Front Fog Lamp Bridge

On central electrical unit.

PTC-Resistor

Mounted on fresh air intake
hose, near air filter.
