



UD. Change fuel pump (FP)


Special tools: 999 5448

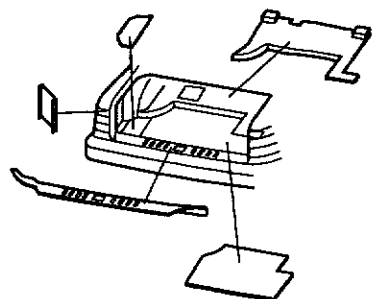

23 00822A

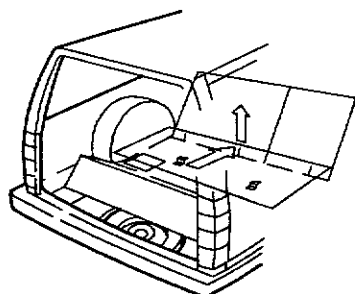

23 00768A

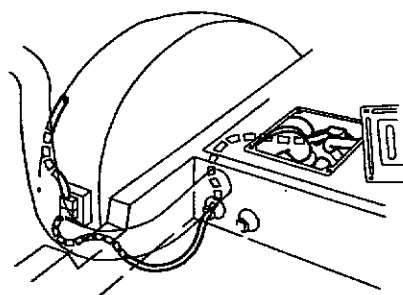

23 00760A

UD1

Remove:

4-door models:

- Spare wheel cover.
- Trunk floor carpeting.

5-door models:

- Left rear wheel-arch cover.
- Floor panel behind rear seat. (Fold down seatback to reach nuts and then draw panel forwards and upwards.)

UD2

Remove:

- Tank unit cover. Clean around tank unit and hose connections.
- Hoses from tank unit. (Remove quick-release coupling by simultaneously pressure on hose and sliding sleeve upwards.)

Note:


Wear a mask to avoid inhaling fuel vapor.

UD3

Remove:

- Hose clips around nut.
- Nut to tank unit with tool 999 5448.
- Lift up tank unit as far as electrical leads allow.
- Seals.

If nut is not replaced within about half a day, it must be changed or it will not fit and leakage will result.

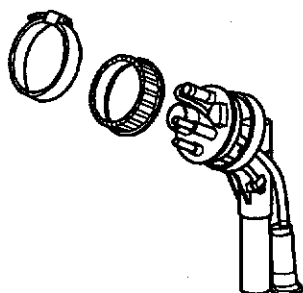


23 00761A

Slack off pump

First detach lower pump fastener then upper fastener.


- Disconnect electrical leads.
- Slack off hose clip at pump.
- Carefully remove pump from hose.
- Change pump.

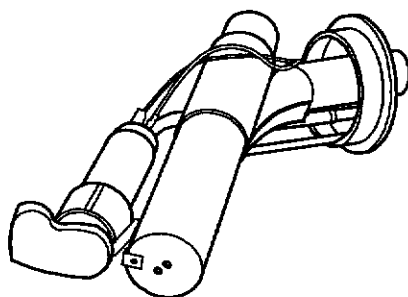

23 00770A

Fit:

- Pump electrical wiring.
- Pump to hose and tighten hose clip.
- Attach upper fastener first.
- Press in lower fastener.

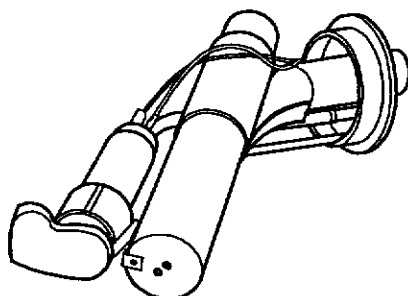

23 00770A

UD1

itback to
1

UD2

10se

3 coupling
ing




UD5

UD6

Fit tank unit

- Fit new seal to tank opening.
- Grease tank unit contact surface with a thin layer of petroleum jelly (glycerol).
- Lower tank unit into tank, taking care not to damage pump fixings against tank wash-plates. Check that seal is not drawn into tank.

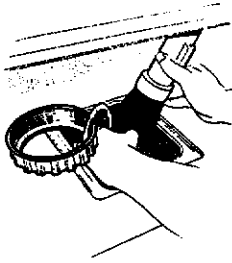


144117S

UD7

Locate tank unit

- Locate position marks against tank plastic joints (see Fig).
- Enter nut and tighten with tool 999 5448, taking care not to damage nipples.
- Lock with hose clip.

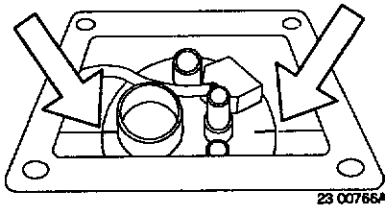


23 00766A

UD8

Fit:

- Hoses. Check that hoses cannot slip off pipes on tank unit.
- Tank unit cover.

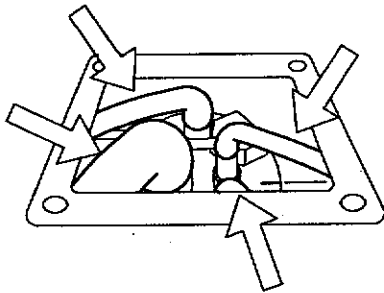


23 00769A

UD6

UD10

er of
nage
that

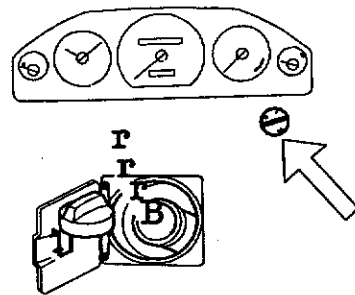


23 00767A

Carry out function check

Check pump and measurement functions.

UD7

ts (see
g care

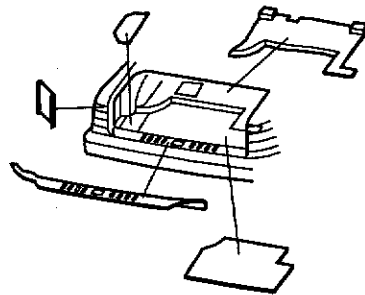

23 00822A

UD11

Fit:

4-door models:


- Spare wheel cover.
- Trunk floor carpeting.

5-door models:

- Left rear wheel-arch cover.
- Floor panel behind rear seat.

UD8

on tank

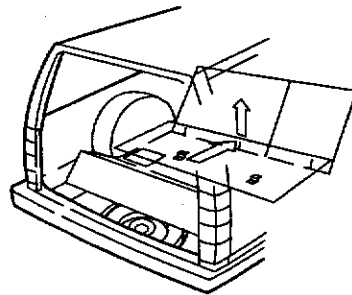

23 00768A