

## Center roof panel, replacing

**Obs!** As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information in the illustrations is always correct.

1

If emergency opening is necessary, see VCC-264422-1, Emergency opening of roof to service position or VCC-265282-1, Emergency closing of roof to service position.

**Obs!** When replacing roof panels, these shall be replaced one at a time so that the roof's link system does not lose its position.

### Removal


2

#### Removing middle roof panel

Remove the headlining's hinges acc. to: VCC-265244-1, Hinge, center headlining, replacing

**Obs!** Mark all positions to facilitate installation of the roof panel.

Remove in the order shown by the figures.

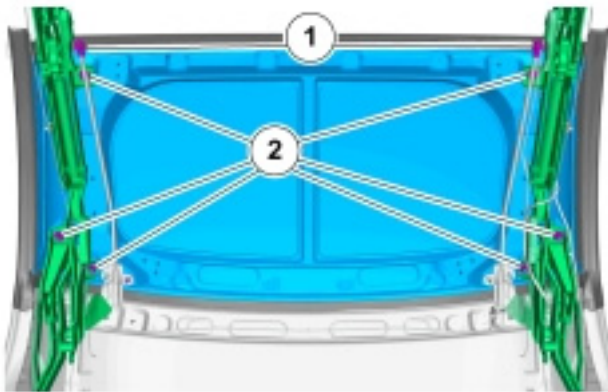

IMG-

235465



## Installation


**Obs!** For tightening torques, see: VCC-149646-1, Tightening torque.

3

### Installing middle roof panel

235507

IMG-

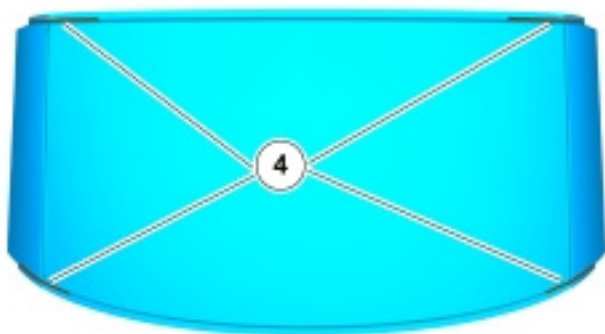

Seal acc. to figure (4) with butyl tape, part number 116 1782, before the rubber strip is reinstalled on the roof panel. Pull out the tape so that it becomes approx. 4 mm thick.

Install in the reverse order.

235520

IMG-



**Obs!** Reinstall the headlining after the roof has been adjusted.

Adjust the roof as described in VCC-264611-1, Roof, adjusting.

Install the headlining's hinges acc. to: VCC-265244-1, Hinge, center headlining, replacing.

235521

IMG-