

Rear power window, adjusting

Specialverktyg: T9512335, GLASLYFTARE 2 ST (ERSÄTTER 9986030)

Obs! The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Adjustment


1

Adjusting rear side window

Raise the window and check that it enters in the rubber strip.


Adjust sideways so that it runs right in the strip.

Remove the side panel in the rear seat as described in VCC-261406-1, Rear seat side panel, replacing.

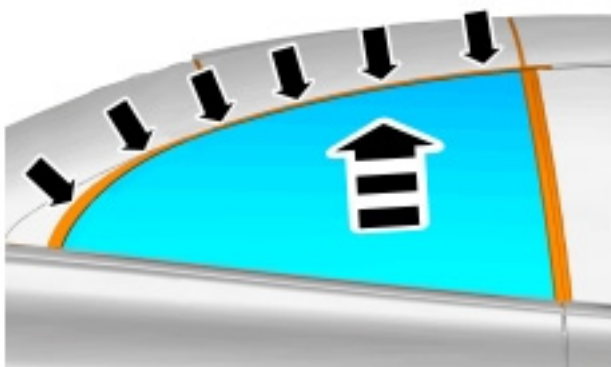

IMG-


235671

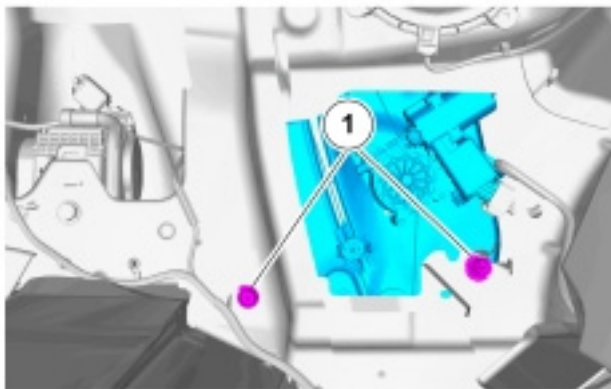

IMG-

235673

The adjusting screws (1), move the window sideways. Three revolutions are approx. 1 mm. Tighten acc. to: VCC-149646-1, Tightening torque.

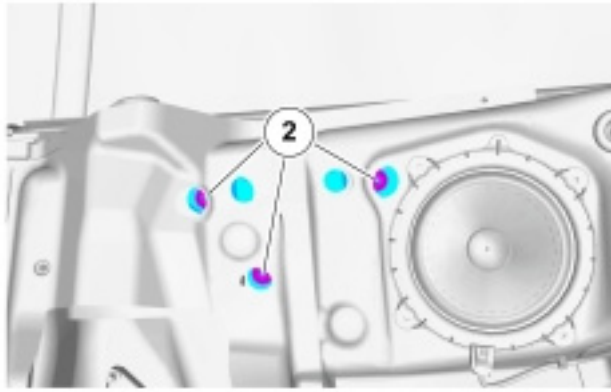


IMG-

235678

Adjust the side window's position, first vertically then fore-aft.

Loosen the screws (2) that hold the side window.
Max. 1.5 revolution. Tighten acc. to: VCC-149646-1,
Tightening torque.

2

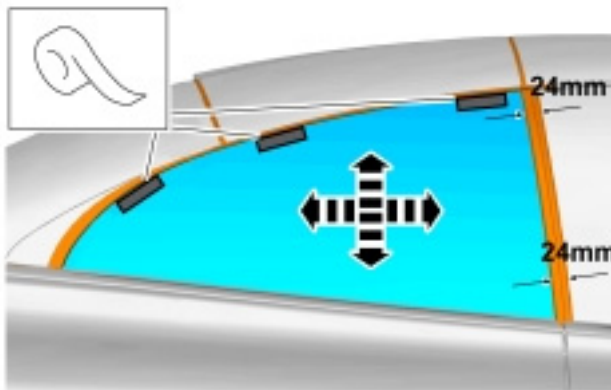


IMG-

235680

Place a tape marking on the window 8 mm from the top edge.

Slide the window to the right position with a glass lifter:
T9512335, GLASLYFTARE 2 ST (ERSÄTTER 9986030).

3

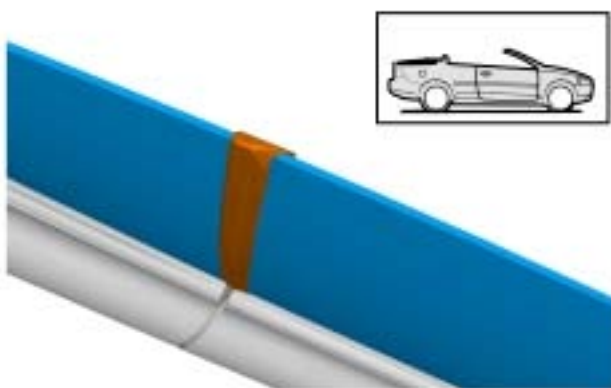

IMG-

235683

Check the window's position.

Install the side panel in the rear seat acc. to:
VCC-261406-1, Rear seat side panel, replacing.