

Roof complete, replacement

Obs! As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information in the illustrations is always correct.

Preparatory work

1

To replace the roof complete, exposing has to be done with the roof in several different positions.

That's why the order for removal may vary to avoid having to move the roof by hand several times.

Move the roof to the right position acc. to: VCC-264422-1, Emergency opening of roof to service position or VCC-265282-1, Emergency closing of roof to service position.

Viktigt! When the roof is operated with loosened parts, pay special attention so that parts are damaged.

Removing

2


Removing roof, complete

Overview:

- 1 hydraulic hoses
- 2 wires, relief for hydraulic pressure
- 3 cable to hydraulic pump.

Expose the hydraulic pump's hoses acc. to VCC-264605-1, Hydraulic pump, replacing.

Tips: The panels do not have to be removed completely from the vehicle.

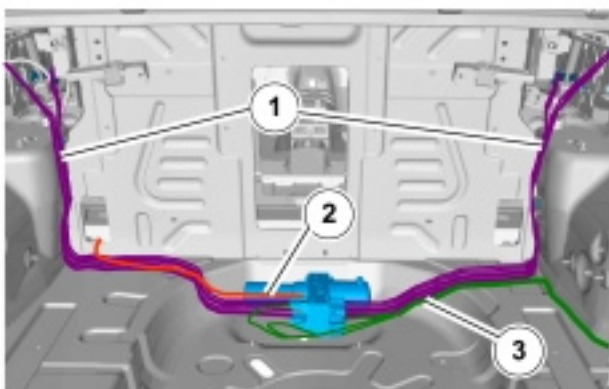

IMG-

235540


3

Remove the ski hatch as described in VCC-262221-1, Ski hatch, replacing.

4

Remove the side panels according to: VCC-261406-1, Rear seat side panel, replacing.

1

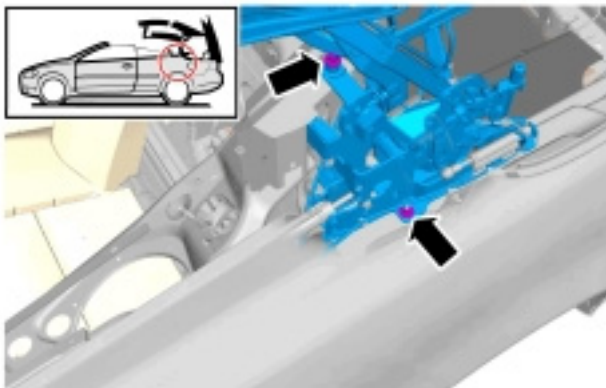


IMG-

235543

Remove the 2 screws.

Mark out the positions against the body.

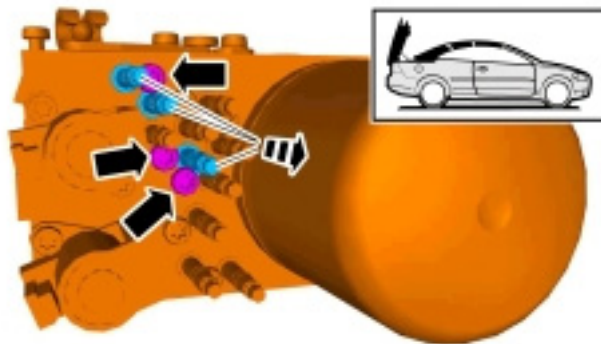

IMG-


235544

Close the roof but do not lock into place at the front edge.

Loosen hoses 91, 92 and 93 from the hydraulic pump so that they are completely separated from other hoses, 3 pcs. M6.

Viktigt! Risk of oil spill. Use protective paper.

Loosen the other hoses from the body.

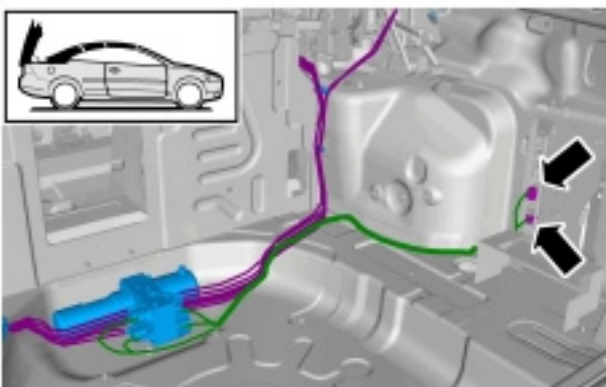

IMG-

235560

Remove the cables from the control module.




IMG-

235561

Disconnect the cable harness.

10

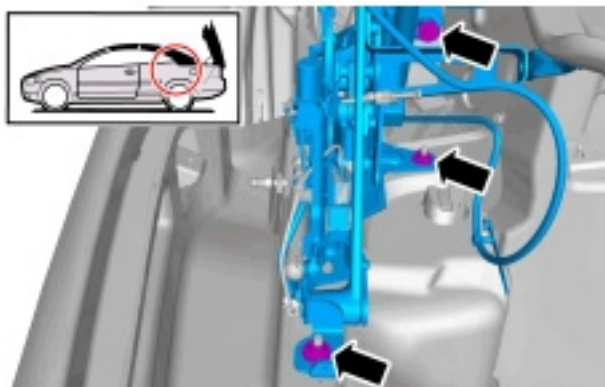


IMG-

235562

Mark the link system's position against the body.
Remove the screws and nuts, 3 pcs. M8.

11

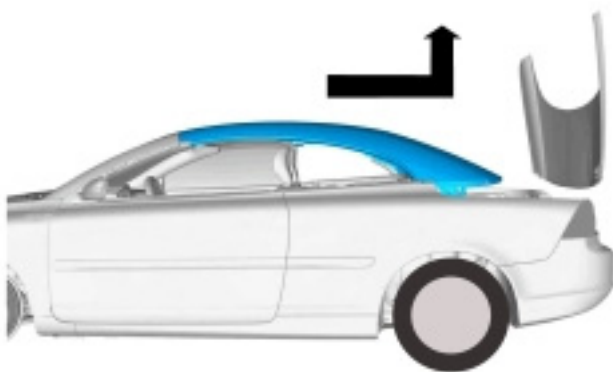

IMG-

235563

Lift away the roof. Three persons are needed for this work, two that hold the roof parts and a third that checks the cables and lifts the hydraulic pump.

Installing

Obs! For tightening torques, see: VCC-149646-1, Tightening torque.


12

Installing roof, complete

Install hydraulic hoses 91, 92 and 93 for the hydraulic pump on the spare part.

To start, place the roof according to the old marking.

Install in the reverse order.

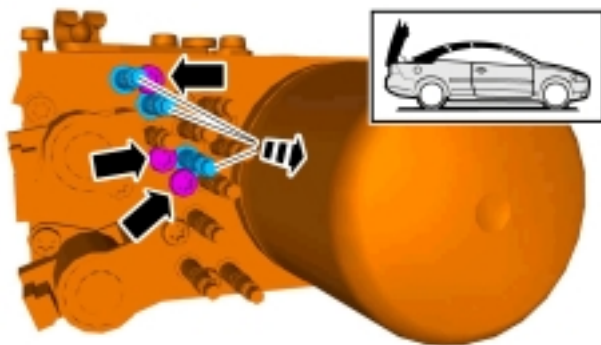

IMG-

235564

Adjustment

13

Adjust the roof as described in VCC-264611-1, Roof, adjusting.