Header text

1

Roof, integrity check


Obs! The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Check

Roof, integrity check

Rinse with lots of water when checking for leaks.

Check extra carefully at the points indicated in the figure. In case of leakage, see: VCC-264611-1, Roof, adjusting.

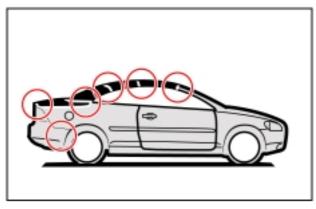


IMG-

235730


Chapter title

Header text 2

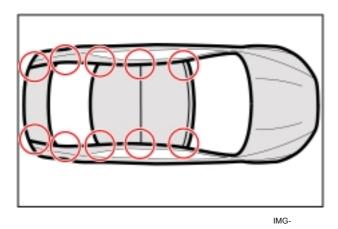

235732

235734

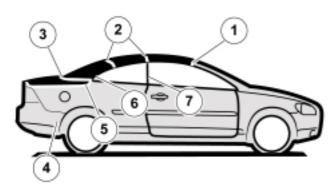

IMG-

In case of leakage at indicated positions in the figure, see:

- 1 seal strips roof bow/A-pillars: VCC-264600-1, Weatherstrip, roof bow/A-posts, replacing
- 2 roof panel middle: VCC-265341-1, Center roof panel, replacing
- 3 trunk lid: VCC-264618-1, Trunk lid, adjusting
- 4 check installation of the bumper: VCC-264948-1, Bumper rear, replacing
- 5 seal strip luggage: VCC-264604-1, Cargo compartment weatherstrip, replacing
- 6 seal strip rear roof panel: VCC-264602-1, Weatherstrip, rear roof panel, preplacing
- 7 side windows: VCC-264620-1, Rear power window, adjusting and VCC-264621-1, Front side power window, adjusting.