



LE-JETRONIC FUEL INJECTION SYSTEM

1. Fuel tank
2. Fuel pump
3. Fuel filter
4. Fuel rail
5. Pressure compensator
6. Computer
7. Spark plug
8. Injector
9. Cold-start injector
10. Idling-speed adjustment
11. Throttle-valve contact breakers
12. Throttle butterfly
13. Air metering valve
14. Intake air temperature sensor
15. Relays
16. Not applicable
17. Coolant temperature sensor
18. Cold start thermo-time switch
19. Distributor
20. Extra air for cold start
21. CO-adjustment
22. Battery
23. Contact-switch