

Service Bulletin.

Oil-bath type air filter.

For customers who want it, we have now an air filter of the oil-bath type available for the B16A engine. This air filter, with the components required for fitting it, is sold by our Spare Parts Department under the following set numbers:

279467 for P 44403 (B16A)
P 44404 (B16A)
P 44409 (B16D)
P 44501 (B16A)
P 44505 (B16A)
P 44506 (B16A)
P 44507 (B16A)
279468 for P 12004 (B16A)

Fitting is simple and the location of the various components is shown in the illustration on the reverse side of this sheet.

Service instructions.

The filter should be removed for cleaning after about every 10000 km (6000 miles).

1. Remove and disassemble the air filter.
2. Empty out the old oil. Clean the housing and the element in white spirit or petrol. Blow dry with compressed air.
3. Fill with oil of the same type as used in the engine up to the "Level" mark. Assemble the filter.
4. Fit the filter on the engine.

