

## Trunk lid, adjusting

**Obs!** The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

### Adjustment

1


#### Trunk lid clearance, adjusting

Adjust the trunk lid's clearance acc. to: VCC-264635-1, Doors/hood/trunk lid/roof, adjustment dimensions.

2


#### Adjust the trunk lid at the front edge using the lock brace:

- 1 adjusts the trunk lid fore-aft
- 2 adjusts the trunk lid vertically.

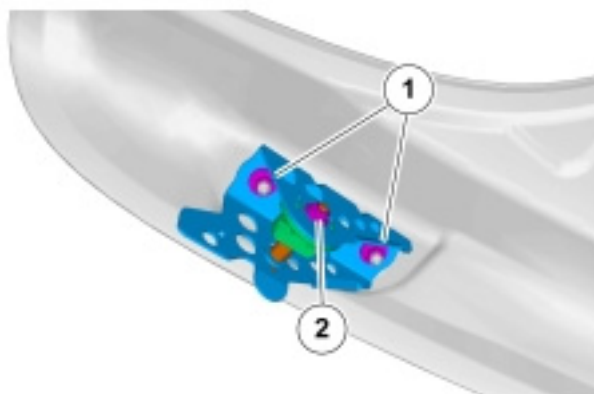

IMG-

235640

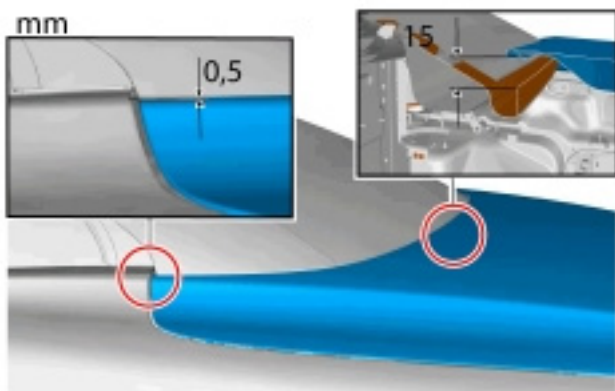


3

**Adjust the trunk lid:**

- sideways with the lock in the backpiece
- vertically with the lock brace in the trunk lid.

4


235641

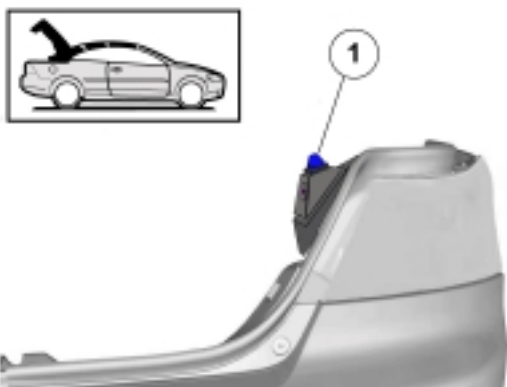

IMG-

Adjust the trunk lid's support to the right height.  
Apply playdough or similar on the support (1).

235642

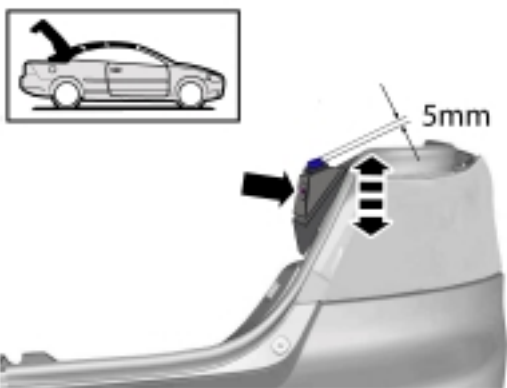

IMG-

Carefully close the trunk lid to the first stage in the lock.  
The playdough shall be 5 mm thick when the support is at the right position.

235645

IMG-